شرکت مهندسی بازرگانی ارکید دنا

# **امکانات جدید در درایوهای سری** ETS ورژن IR

شرکت مهندسی بازرگانی ارکید کمار تو میرک



مقدمه۴
فصل اول: نصب و ابعاد
فصل دوم: سیمبندی و اتصالات موتورها و درایو۸
۱–۱ سیمبندی تغذیه درایو
۲–۱ سیگنال های ورودی و خروجی
۳-۱ اتصالات کانکتور قدرت موتور
۴-۱ اتصالات کابل انکدر
۵-۱ اتصالات ترمز
فصل سوم: پانل اپراتوری دیجیتال
۲-۱ عملگرهای اصلی
۲-۲ نمایش وضعیت در مد های کنترلی مختلف
۳-۲ انتخاب و تنظیم عملگرهای اصلی
۲-۴ عملکرد مد مانیتور ( Un)
۲-۵ انتخاب وتنظیم عملگرهای کمکی( Fn)
فصل چهارم: تنظیمات مربوط به انتخاب موتور و انکدر برای محورها
فصل پنجم: استفاده از فانکشن JOG در مدهای کنترلی مختلف
۱−۴ فانکشن JOG با استفاده از پنل اپراتوری
۲-۴ فانکشن JOG با استفاده از ورودیهای دیجیتال
۳-۴ فانکشن JOG با استفاده از شبکه ارتباطی Modbus (RS485)
فصل ششم : مد کنترلی Internal Position
۵-۱ مقدمه
۲-۵ تنظیمات اولیه
۳-۵ نحوه اعمال ورودی Emergency Stop
۴–۵ تغییر حالت پایه ورودیP-CON
۵–۵ استفاده از تایمر داخلی
۶-۵ حالت کاری Incremental و Absolute
۵_۷ استفاده از پایه ( CLR ( Clear
۵.۸ تعریف یک ورودی دیجیتال به عنوان Pause



۳۹	فصل هفتم: انتخاب 16 موقعیت در مد Internal position با ۴ ورودی دیجیتال
	۱_۶ تعریف ورودیهای دیجیتال
	۱_۶ فعالسازی فانکشن
	۱_۶ تعیین مقادیر موقعیتها
۴۲	فصل هشتم: مد کنترلی External Position
40	فصل نهم: پروسه Homing داخلی درایو
	۱–۸ تنظیمات جهت استفاده از پروسه Homing
۴۸	فصل دهم: مد کنترلی Speed Control(Parameter Reference
۴۹	فصل یازدهم: مد کنترلی Speed Control(Contact Reference
	۱۰–۱۱ مد کنترلی Speed Control Contact Reference
	۲-۱۰ مد کنترلی قابل انتخاب Speed / Position
۵۰	فصل دوازدهم: سوييچ بين مد كنترلي
Speed Control (Conta	ct reference) ↔Internal Position
۵۲	فصل سیزدهم: 4 عدد ضریب گیربکس الکترونیکی قابل انتخاب
	۱-۱۲ تعریف ورودیهای دیجیتال
	۲_۲۱ فعالسازی فانکشن
	۳_۱۲ تعیین مقادیر ضرایب گیربکس الکترونیکی
	۲-۲۴ تغییر آنلاین ضریب گیربکس الکترونیکی از طریق مدباس
۵۴	فصل چهاردهم: Gantry کردن محورها
	۱۳–۱ مقدمه
	۲–۱۳ مدهای کاری و تنظیمات اولیه در روش Gantry
۵۲	فصل پانزدهم: فانکشنهای کاربردی متنوع
	۱–۱۴ تعاریف جدید ورودیهای دیجیتال سرو درایو
	۲–۱۴ امکان تغییر موقعیت موتور در درایو از طریق (MODBUS)
	۳–۱۴ آدرس های مدباس پارامترها در ETS
	۴–۱۴ امکان استفاده از رله های خروجی به عنوان تشخیص میزان Torque
۶۱	فصل شانزدهم: لیست پارامترها
٨۵	فصل هفدهم: لیست آلارم ها



مقدمه:

درایو ETS نتیجه ماهها کار گروهی کارشناسان شرکت مهندسی بازرگانی ارکید دنا و کارشناسان R&D شرکت Estun میباشد که با توجه به نیازمندیهای صنعت ایران طراحی و اجرا شده است و در جهت سهولت کاربری، امکانات بسیار کاربردی در اختیار مشتریان سروهای Estun قرار میدهد. مشخصه درابوهای ETS به صورت زیر می باشد:



شركت مهند



فصل اول - نصب و ابعاد

1-1 شرايط نصب سرو درايو وسرو موتور

نصب سرو درايو:

نصب ناصحیح سرو درایو باعث ایجاد مشکلاتی در آنمی گردد.به دستورات زیر درهنگام نصب توجه فرمایید.

مشخصات محل نصب درايو:



- ۱- اگر درایو را در یک تابلو برق نصب میکنید، سایز و مشخصات آن را به گونه ای انتخاب کنید که حرارت اطراف
  درایو از ۵۵درجه سانتیگراد تجاوز نکند.
- ۲- اگر سرو درایور را در نزدیکی یک منبع تولید حرارت نصب میکنید، باید توجه داشته باشید که درایو مستقیماً در معرض مستقیم حرارت قرار نگیرد و حرارت اطراف درایو از ۵۵درجه سانتیگراد تجاوز نکند.
  - ۳- محل نصب درايو را از منابع ايجاد لرزش كاملاً ايزوله نماييد.
- ۴- در هنگام نصب توجه به این مطلب ضروری است که درایو در معرض گازهای خورنده قرار نگیرد. اثر گازهای خورنده فوری نمیباشد، بلکه این گازها به مرورزمان باعث فرسودگی و معیوب شدن قطعات داخلی درایو میشوند. پس اقدامات لازم جهت اجتناب از قرار گرفتن درایو در این محیطهارا مبذول فرمایید.
  - ۵- محیط اطراف درایو نباید خیلی گرم ویا مرطوب و یا دارای غبارهایی مانند پودر آهن باشد.

آشنایی با روش نصب درایو:

به منظورایجاد گردش هوا در داخل درایو همانطوریکه در شکل زیر نمایش داده شده درایوباید برروی یک دیواره نصب گردد.





روش نصب چند درایو کنار یکدیگر:

اگر چند درايورا كنار هم نصب ميكنيد، حداقل فاصله بين درايوها بايدمانند شكل زير رعايت شود.



### نحوه نصب سرو درايو:

درايوها رابه صورت ايستاده به ديوار نصب نماييد به طوري كه كانكتورهاي درايو، روبروي شما قرار گيرند.

#### تهويه:

فاصله لازم بین درایوها را رعایت نمایید تا با استفاده از فن ویا از طریق انتقال حرارت به صورت طبیعی، اجازه خنک شدن به درایوها داده شود.

## شرایط محیطی اطراف درایو:

۱- دمای مجازاطراف درایو0 تا 55 درجه سانتیگراد تعیین شده است.این دما برای زمانهای طولانی باید به کمتر از ۴۵

درجه تنزل يابد.

- ۲- میزان رطوبت مجازبایستی زیر %90 باشد.
- ۳- میزان ارتعاش درایو نباید بیشتر از m/s<sup>2</sup> 4.9 باشد.
- ۴- بایستی درایو از یخ زدگی وغلظت محیط محافظت شود.

تواز کردن نصب موتور شفت موتور را همتراز شفت ماشین مورد نظر قرار دهید و شفت ها را بوسیله کوپلینگ ارتجاعی به هم متصل نمایید. سرو موتور را با رعایت فاصله، به صورت زیر نصب نمایید. فاصله را در چهار نقطه محیطی اندازه گیری نمایید.اختلاف نصب می بایست کمتر از 0.3mm باشد. نکته:

- ۱ اگر تنظیمات به درستی صورت نگیرد ، سبب آسیب دیدن بلبرینگ ها و انکودر موتور می شود .
- ۲- از هر گونه فشار مکانیکی به انتهای شفت خودداری نمایید ، در غیر این صورت انکودر موتور آسیب می بیند.



### نصب سرو موتور

سرو موتور را هم درجهت افقي وهم در جهت عمودي مي توان نصب نمود.

# تماس با آب و روغن

در صورتیکه موتور در معرض آب و روغن قرار دارد ، از سرو موتور مجهز به کاسه نمد(Oil Seal) استفاده نمایید. کشیده شدن کابل

تا حد امکان از خم شدن کابلها و کشیده شدن آنها جلو گیری نمایید.(قطر سیمهای انکودر 0.3mm – 0.2 می باشد.)

## فصل دوم: سیمبندی و اتصالات موتورها و درایو

## ۲-۱) سیمبندی تغدیه درایو

ترتيب سيمبندي تغذيه ورودي بصورت سه فاز 200 ولت يا تكفاز 220 ولت ميباشد.

شرکت مهندسی بازرگانی ۱. کول کومار ۱. کول







**نکته ۱:** در درایوهای سری ۲ETS محور، قسمت خاکستری رنگ شکل فوق که مربوط به موتور محور C میباشد، حذف می گردد.

نکته ۲: در اتصال به صورت تکفاز پایه های L1 و L2 باید به یکدیگر Jump گردند .



Terminal	Namo	Functions
Symbol	Name	Functions
L1, L2, L3	Main circuit power supply input terminal	Three-phase 200~230VAC +10%~-15% (50/60Hz)
U_A, V_A, W_A	Axis A servomotor connection terminals	Connect to the axis A servomotor.
U_B, V_B, W_B	Axis B servomotor connection terminals	Connect to the axis B servomotor.
U_C, V_C, W_C	Axis C servomotor connection terminals	Connect to the axis C servomotor.
L1C, L2C	Control circuit power supply input terminal	Single-phase 200~230VAC +10%~-15% (50/60Hz)
Ð	Ground terminals	Connects to the power supply ground terminals and servomotor ground terminal.
B1, B2, B3	External regenerative resistor connection terminal	If using an internal regenerative resistor, please short B2 and B3. Remove the wire between B2 and B3 and connect an external regenerative resistor(provided by customer) between B1 and B2, if the capacity of the internal regenerative resistor is insufficient

۲-۲) سیگنالهای ورودی و خروجی

**نکته:** سیمبندی و پایههای ترمینال CN1-A,CN1-B,CN1-Cشبیه هم هستند.





شرکت مهندسی بازرگانی ارکیدلما

کانکتور فلزی	ч EMG	سرى EML.	ستیکی ضد آب	سرىEMJ با كانكتور پلاه	ن معمولی	EMJ با كانكتور پلاستيكر	نوع موتور سرىآ
((		)				21	اتصالات كابل
شماره پین	سيگنال	رنگ	شعاره يين	رنگ سیگنال	شماره پین	نگ سیگنال	قدرت ر
A	U phase	قرمز	1 U	آبی phase	1	رمز U phase	(كانكتور
В	V phase	ایی	2 1	قرمز phase	2	ابى V phase	ماد دی)
С	W phase	مشکی یا سفید	3 V	مشکی یا سفید phase	3	, یا سفید W phase	از نمای روبرو مشکی
D	FG	سيزازرد	4	سبزازرد FG	4	زارد FG	<del>,</del>
			B Type 8	EMG , EML نوخ	سرى		نوع موتور
			شعاره پین	سیگنال	شعاره پين	سيگنال	
	H	2	A		F	W phase	اتصالات کابل قدرت
			В	U phase	G	B1	
	1000	OE	С	FG	H	B2	(کانگنور مادگی)
		$\leq$	D	FG	1	V phase	از نمای روبرو
			E	-			
						11	
12							

۲-۳) اتصالات کانکتور قدرت موتور( کانکتور مادگی سمت کابل از نمای روبه رو)



۴-۲) اتصالات کابل انکدر ( کانکتور مادگی سمت کابل از نمای رو به رو)

اتصالات کابل انکدر 2500 پالس موتور سری EMJ با کانکتور پلاستیکی (BMP-JB24-XX)

E.	ti e li	كانكتور انكدر كابل موتور	شماره پین در کانکتور انکدر
رتک سیم	نام سیکتال	(مادگی)	2NCدرايو
آبى	A+	1	1
آبی/مشکی	B+	2	3
سبز	C+	3	5
سبز /مشکی	A-	4	2
زرد	B-	5	4
زرد/مشکی	C-	6	6
مشکی	PG 0V	7	19
قرمز	PG 5V	8	9
شیلد	FG	9	اتصال به بدنه فلزى كانكتور



كانكتور انكدر كابل موتور



اتصالات کابل انکدر 2500 پالس موتور سری EMJ با کانکتور ضد آب (BMP-JE24-XX)

كانكتور انكدر كابل موتور	. Et	ti e si	كانكتور انكدر كابل موتور	شماره پین در کانکتور انکدر
(مادگی)	رىت سىم	نام سيكتان رتك سيم	(مادگی)	2NCدرايو
	آبى	A+	1	1
	آبی/مشکی	A-	2	2
$\left( \begin{pmatrix} 07 & 30 \\ 08 & 30 \end{pmatrix} \right)$	سبز	B+	3	3
	سبز /مشکی	В-	4	4
	زرد	C+	5	5
	زرد/مشکی	C-	6	6
All and the Part	مشکی	PG 0V	7	19
	قرمز	PG 5V	8	9
	شیلد	FG	9	اتصال به بدنه فلزى كانكتور



اتصالات کابل انکدر 2500 پالس موتور EMG-EML سری A با کانکتورفلزی (BMP-GA24-XX)

كانكتور انكدر كابل موتور	E.	ti:Eali	شماره پین در کانکتور انکدر	شماره پین در کانکتورانکدر
(مادگی)	رەت سىم	الم سيكتان رتك سيم	2NCدرايو	2500پالس 9 پين(مادگى)
$\bigcirc$	آبى	A+	1	Α
B OA ON	آبی/مشکی	A-	2	В
$ \begin{pmatrix} \begin{pmatrix} c & N_0 & 0_L \\ 0 & OP & TO \\ P_0 & OR & SO \end{pmatrix} $	سبز	B+	3	С
	سبز /مشکی	B-	4	D
FO 0 0H	زرد	C+	5	E
·	زرد/مشکی	C-	6	F
	مشکی	PG 0V	19	G
	قرمز	PG 5V	9	Н
	شیلد	FG	اتصال به بدنه فلزي كانكتور	J

اتصالات کابل انکدر 2500 پالس موتور EMG-EML سری B با کانکتورفلزی فشاری (PMP-GA24-XX-II)

رنگ سیم	نام سیگنال	كانكتور انكدر كابل موتور	شماره پین در کانکتور انکدر
		(مادگی)	2NCدرايو
آبى	A+	1	1
آبی/مشکی	A-	2	2
سبز	B+	3	3
سبز /مشکی	В-	4	4
زرد	C+	5	5
زرد/مشکی	C-	6	6
مشکی	PG 0V	7	19
قرمز	PG 5V	8	9
شیلد	FG	10	اتصال به بدنه فلزى كانكتور

كانكتور انكدر كابل موتور







**نکته ۱:** جریان مجاز خروجی های ترانزیستوری درایو ۵۰ میلی آمپر است. بنابراین در انتخاب رله R1 دقت نمایید، که بوبین رله بیشتر از جریان مجاز نباشد.

نکته ۲: مطابق این سیم کشی پارامتر PN511.1 می بایست روی عدد ۴ تنظیم گردد.



فصل سوم : پانل اپراتوری دیجیتال

۱-۳) عملگرهای اصلی

کار با پانل اپراتوری:

پانل اپراتوری سروهای ETS همانطور که در شکل زیر نمایش داده شده است، از ۵ کلید ویک نمایشگر ۵ قسمتی تشکیل شده که برای نمایش حالات و تنظیم پارامترها و توابع سرو مورد استفاده قرار میگیرند.



اركيد المستقل مستقل المستقل المست ومستقل المستقل المست ممستقل المستقل المستقل



## نمایش وضعیت پانل:

شركت مهند

در این حالت، یک سری از اطلاعات مربوط به حالات کاری و وضعیت کنونی سرو با فرمت باینری و کد نمایش داده می شود، که در زیر به تشریح این مد می پردازیم. وقتی شما سرو را روشن می کنید به صورت پیش فرض آنچه در پانل نمایش داده می شود. همین مد می باشد در غیر این صورت میتوان با فشار کلید MODEوارد این حالت نمایش شد.

۲-۳) نمایش وضعیت در مد های کنترلی مختلف:



شرکت مهندسی بازرگانی ار کیدل مالم

مد کنترلیTorque/Speed			مد کنتر لی Position	شماره
Data Bit	توضيحات	Data Bit	توضيحات	
Speed Coincidence	هنگامی که اختلاف بین سرعت واقعی موتور و سرعت رفرنس ورودی کمتر از مقدار مشخص شده در پارامتر Pn501 شود، این نشانگر روشن و در غیر این صورت خاموش می گردد	Positioning Complete	هنگامی که اختلاف بین موقعیت واقعی موتور و موقعیت رفرنس ورودی کمتر از مقدار مشخص شده در پارامتر Pn500 شود، این نشانگر روشن و در غیر این صورت خاموش می گردد	1
Base Block	هنگام توقف سرو، Base Block روشن و با فعال شدن سرو خاموش می گردد.	Base Block	هنگام توقف سرو، Base Block روشن و با فعال شدن سرو خاموش می گردد.	2
Control Power ON	روشن بودن این نمایشگر بیانگر وصل بودن تغذیه قسمت کنترل است.	Control Power ON	روشن بودن این نمایشگر بیانگر وصل بودن تغذیه قسمت کنترل است.	3
Speed Reference Input	چنانچه مقدار سرعت رفرنس ورودی از سرعت مشخص شده در پارامتر Pn503 بیشتر شود، این نشانگر روشن و در غیر این صورت خاموش می گردد.	Reference Pulse Input	چنانچه پالسی به ورودی رفرنس وارد شود، این نشانگر روشن و در غیر این صورت، خاموش می گردد	4
Torque Reference Input	چنانچه مقدار گشتاور رفرنس ورودی از گشتاور تنظیمی بیشتر شود، این نشانگر روشن و در غیر این صورت خاموش می شود مقدارگشتاور تنظیمی برابر ۱۰درصد حداکثر گشتاور تنظیم شده است.	Error Counter Clear Input	با وارد شدن سیگنال پاک کننده شمارنده خطا، این نشانگر روشن و در غیر این صورت، خاموش می گردد.	(5)
Power Supply	وقتی تغذیه در حالت معمولی باشد، این شاخص روشن و در غیر این صورت خاموش است	Power Supply	وقتی تغذیه در حالت معمولی باشد، این شاخص روشن و در غیر این صورت خاموش است.	6
/TGON	چنانچه سرعت موتور از مقدار مشخص شده در پارامتر Pn503 بیشتر شود، این نشانگر روشن است و اگر سرعت موتور کمتر باشد، این نشانگر خاموش می شود.	/TGON	چنانچه سرعت موتور از مقدار مشخص شده در پارامتر Pn503 بیشتر شود، این نشانگر روشن است و اگر سرعت موتور کمتر باشد، این نشانگر خاموش می شود.	7



نمایش *کد*ها

نشانه	کد	شرح	نشانه	کد	شرح
Pot	Forward Rotation Prohibited	چرخش محور به راست ممنوع	888	Base Block	سرو غیر فعال است
noŁ	Reverse Rotation Prohibited	چرخش محور به چپ ممنوع	<u>r u n</u>	RUN	سرو فعال است
			888	Alarm Status	نمایش آلارم

۳-۳) انتخاب وتنظیم عملگرهای اصلی

کارکردن در مد تنظیم پارامترها:

در این مد از طریق پارامترها عملکرد سرو انتخاب ویا تنظیم میشوند. برای آشنایی بیشترنمونه ای از روش تعویض مقدار یک پارامتر در زیر نشان داده میشود. هنگام تغییر پارامترها مقادیر مجاز آنها را نیزدر نظر داشته باشید.برای مثال میخواهیم مقدار Pn012را که در آن عدد ۱۰۰ قرار گرفته،با عدد۸۵مقداردهی کنیم:

نمايش	تشريح	رديف
8 - 8 8 8	ابتدا با فشار دكمه MODE، وارد مد تنظيم پارامترها مي شويم.	١
Ph8 12	با فشار کلید NCاویاDECوارد شماره پارامتر مذکور میشویم.	۲
88888	با فشار کلید ENTERوارد محتوای پارامتر می شویم.	٣
88885	با فشار کلیدهای NCاو DECمقدار داخل پارامتر را تغییر می دهیم.	۴
P - 8 12	با فشار کلید ENTER و یا MODEمقدار تنظیم شده در داخل پارامتر ذخیره می شود.	۵



این مد به کاربر اجازه می دهدکه مقادیر ورودیهای رفرنس ووضعیت سیگنالهای ورودی و خروجی و نیز پارامترهای داخلی سرو را در نمایشگر مشاهده نماید.

## استفاده از مد مانیتور:

دراینجا مثالی از روش استفاده از این مد بسیار کار آمد را نشان میدهیم. برای مثال می خواهیم موقعیت انکدر را ببینیم. طبق جدولی که در پایین به بررسی آن میپردازیم،برای این کار باید Un009 و Un010 را فعال نمود.در Un009موقعیت انکدر با دقت کمتر از 10000 ودر Un010 موقعیت انکدر با دقت 10000

نمايش داده مي شود. به عنوان مثال ما مقدار Un009 را ببينيم. براي اين كار طبق جدول زير عمل ميكنيم.

نمايش	تشريح	رديف
86888	ابتدا با استفاده از کلید MODE، مد مانیتور را انتخاب می نمائیم.	١
Un089	سپس با استفاده از کلیدهای NCاو DECوارد شماره مانیتور مربوطه می شویم.	۲
88588	حال با فشار کلید ENTERمحتوای آن را مشاهده می کنیم.	٣
Un 889	با فشار دوباره کلید ENTERدوباره به قسمت انتخاب مد اصلی باز می گردیم	۴



## حالات مختلف نمایش در مد مانیتور:

	شرح	شماره
	نمایش سرعت واقعی موتور بر حسب دور بر دقیقه	Un000
	Reserved	Un001
	Reserved	Un002
	مقدار رفرنس گشتاور داخلی بر حسب درصد	Un003
	تعداد پالس انکدر بر اساس زاویه انکدر	Un004
	وضعیت ورودی های سرو درایو	Un005
	وضعيت سيگنال هاي انكدر	Un006
نمایش وضعیت با فرمت بیتی	وضعیت خروجی های سرو درایو	Un007
	سرعت بر مبنای پالس با نسبت گیربکس ۱/۱	Un008
	موقعيت جاري زير 10000پالس	Un009
	موقعیت جاري بالاي 10000 پالس	Un010
	شمارندہ پالس خطاکمتر از 16 رقم	Un011
	شمارندہ پالس خطا بیشتر از 16 رقم	Un012
	شمارندہ پالس دریافتی زیر 10000 پالس	Un013
	شمارندہ پالس دریافتی بالای 10000 پالس	Un014
	نسبت اینرسی بار	Un015
	نسبت اضافه بار موتور	Un016
	ولتاژ باس DC	Un017

در ورژن IR علاوه بر حالت هایی که در ورژن استاندارد موجود بود امکان دیدن ولتاژ باس DC نیزوجود دارد که در

Un017

قابل نمایش است.



جدول توضیحات Bit Data مربوط به پارامترهای Un

MonitorNumber	Display LED Number	Content
Un005	0	/SON(CN1_A/B/C-10)
	1	/P-CON(CN1_A/B/C-11)
	2	P-OT(CN1_A/B/C-12)
	3	N-OT(CN1_A/B/C-13)
	4	/ALM-RST(CN1_A/B/C-14)
	5	/CLR (CN1_A/B/C -15)
	6	/PCL(CN1_A/B/C-16)
	7	/NCL(CN1_A/B/C-17)

Monitor Number	Display LED Number	Content
	0	(Not used)
	1	(Not used)
	2	(Not used)
Un006	3	(Not used)
	4	Phase-C
	5	Phase-B
	6	Phase-A
	7	(Not used)

Monitor Number	Monitor Number Display LED Number	
Un007	0	ALM (CN1_A/B/C-3/4)
	1	/COIN(CN1_A/B/C-7/8)
	2	/TGON(CN1_A/B/C-1/2)
	3	/S-RDY(CN1_A/B/C-5/6)



# ۵-۳) انتخاب وتنظیم عملگرهای کمکی(فانکشن ها)

# جدول فانکشن ها

Parameter No.	Function
Fn000	Alarm traceback data display
Fn001	Parameter setting initialization
Fn002	JOG mode operation
Fn003	Reserved
Fn004	Reserved
Fn005	Automatic adjustment of servomotor current detection
Fn006	Manual adjustment of servomotor current detection
Fn007	Software version display
Fn008	Position teaching
Fn009	Static inertia detection
Fn010	Reserved
Fn011	Reserved
Fn012	Reserved
Fn013	Parameters copy
Fn014	Reserved



## ثبت آلارمها:Fn000

از طریق این تابع میتوان به ۱۰ آلارم آخر که در سرو رخ داده است دسترسی پیدا کرد.در زیر روش نمایش آلارمهای ذخیره شده نشان داده شده است.

نمایش	تشريح	رديف
F	ابتدا با استفاده از کلید MODEتوابع کمکی را انتخاب کنید.	١
FABBB	سپس با استفاده از کلیدهای NCاوDEC تابع مربوط به ذخیره آلارمها را انتخاب کنید.	۲
Alarm Sequence NumberAlarm Code	با فشار كليدENTER محتواى آلارم به نمايش در مى آيد كه اولين آنها آخرين آلارم رخ داده شده است.	٣
	با فشار کلیدهای NCاو DECمی توانید توابع قبلی را به تر تیب ببینید.	۴
F - 888	با فشار کلیدENTER دوباره به مدهای اصلی باز گردید.	۵
تن آن به مدت یک ثانیه این کار انجام میگیرد.	ر می خواهید همه آلارمها را پاک کنید با فشار کلید ENTER و نگه داش	نکته: اگ



# باز گرداندن مقادیر پارامترها به مقادیر پیش فرض کارخانه:Fn001

بدین وسیله میتوان بوسیله این تابع کلیه پارامترهای سرو را به حالت پیش فرض کارخانه بر گرداند. در زیر روش استفاده از این تابع را نمایش میدهیم.

نمایش	تشريح	رديف
FABBB	با استفاده از کلید MODEتوابع کمکی را در صفحه نمایشگر انتخاب می نماییم.	١
	با استفاده از کلیدهای NCو DECشماره تابع مورد نظر را انتخاب می نماییم و کلید ENTER را فشار می دهیم. با توجه به اینکه در کدام محور این فانکشن را انجام میدهیم یکی از سه حالت رو برو نمایش داده میشود.	۲
(axis A)		
	با فشار کلید ENTER عبارت زیر در صفحه نمایشگر ظاهر می گردد.	٣
F - 888	به مدت یک ثانیه کلید ENTERرا فشار داده تا عبارتEndبر روی صفحه نمایش ظاهر گردد.	۴
	دیر پارامترها به مقدار پیش فرض باز گشته است.	حال مقاه



در واقع این مدی است که کاربر میتواند سرودرایو وسروموتور خود را بدون استفاده از کنترلر خارجی تست کند.برای این کار تابعی به نام DOLدر سرو تعبیه شده که توسط Fn002فعال میگردد که در زیر به توضیح آن میپردازیم.

نمايش	تشريح	رديف
F A 8 8 8	با استفاده از کلید MODEتوابع کمکی را در صفحه نمایشگر انتخاب می نماییم.	١
FABB	با استفاده از کلیدهای NCاو DECشماره تابع مورد نظر را انتخاب می نماییم.	۲
	با فشار کلید ENTER عبارت زیر بر روی نمایشگر به نمایش در می آید.	٣
	حال با استفاده از فشار کلید MODEسروموتور را فعال می نماییم.	۴
	سپس با استفاده از کلیدهای INCو DECمی توانیم سروموتور را به چپ و راست بچرخانیم.	۵
	Moter forward rotation Motor reverse rotation	
FABBZ	با فشار کلید ENTERدوباره به مدهای اصلی باز می گردیم.	۶
ته:مد JOG صرفا یک مد کنترل Open loop Speed است که فیدبک انکدر ناثیری در عملکرد موتور ندارد. سرعت موتور		
کند و این تست هم زیر	JOC در Pn305 تعیین می گردد. لازم به ذکر است کنترلر خارجی هیچ نقشی در مد JOG ایفا نمی	در مد 🗄
	بدون بار می تواند صورت گیرد.	بار و هم



نمايش	تشريح	رديف
FABBB	با استفاده از کلید MODEتوابع کمکی را در صفحه نمایشگر انتخاب نمایید.	١
FaBBi	با استفاده از کلیدهایINC و DEC شماره تابع مورد نظر را انتخاب نمایید.	۲
<u> </u>	با فشار کلید ENTER ابتدا ورژن نرم افزار DSP نشان داده می شود.	٣
P-388	بعد از مرحله بالا با فشار کلید MODEورژن نرم افزار FPGAو CPLD نمایش داده می شود.	۴
FABBI	با فشار کلید ENTER دوباره به مدهای اصلی باز می گردید.	۵

**تابع تعیین کننده موقعیتFn008:** پس از اجرای Fn008،مجموع موقعیت های تعیین شده درپارمترهایPn687، (۱۰۰۰۰پالس)و Pn688،(۱پالس) به عنوان موقعیت فعلی موتور در حافظه درایو در نظر گرفته می شود.و مقدار این پارامترها در Un009و Un010 قرار می گیرند.

نمایش	تشريح	رديف
FABBB	با استفاده از کلید MODEتوابع کمکی را در صفحه نمایشگر انتخاب نمایید.	١
Fabbb	با استفاده از کلیدهایINC و DEC شماره تابع مورد نظر را انتخاب نمایید.	۲
EERER	با فشار کلید ENTER، عبارت روبرو نمایش داده می شود.	٣
	مجددا کلید ENTERرا فشاردهید، عبارت روبرو نمایش داده می شود.	۴
FaBBB	با فشار کلید ENTER دوباره به مدهای اصلی باز می گردید.	۵



تعیین اینرسی بار با استفاده از Fn009:

جهت تعیین اینرسی بار توسط سرو موتور،از Fn009استفاده نمایید.توجه داشته باشید،در زمان اجرای این فانکشن،سرو با سرعت 800RPM وبه تعداد ۹ دور در جهت راستگرد و ۹ دور در جهت چپگرد می چرخد.سپس مقدار اینرسی بار راروی نمایشگر درایو نشان می دهد.این عدد را در پارامتر Pn106 به عنوان اینرسی بار ،وارد نمایید. اگر در کاربردی ، سرو محدودیت حرکتی دارد، از انجام Fn008خودداری نمایید و جهت تعیین اینرسی بار ، بالاترین مقدار نمایش داده شده در Un015 را به عنوان اینرسی بار در Pn106 وارد نمایید.

نمایش	تشريح	رديف
FABBB	با استفاده از کلید MODEتوابع کمکی را در صفحه نمایشگر انتخاب نمایید.	١
F - 888	با استفاده از کلیدهایINC و DEC شماره تابع مورد نظر را انتخاب نمایید.	۲
🛃	با فشار کلید ENTER، عبارت روبرو نمایش داده می شود.	٣
	با فشار کلیدMODE، سرو با سرعت 800rpm به تعداد9دور در جهت راستگرد و 9دور در	۴
	جهت چپگرد شروع به چرخش می نماید.	
	سرو پس از توقف، مقدار اینرسی بار را نمایش می دهد.	۵
	مقدار نمایش داده شده را در پارامتر Pn106 وارد نمایید تا در استارت موتور اینرسی بار	۶
	جبران شود .	
F - 888	با فشار کلید ENTER دوباره به مدهای اصلی باز می گردید.	۷



فانکشتن کپی پارامتر های یک محور در سایر محور ها با استفاده از Fn013: با استفاده از فانکشن Fn013 می توان پارمتر های تنظیم شده در یک محور در محور های دیگر کپی کرد. نکته: پارامتر های Pn005.3,Pn840,Pn006.3,Pn206,Pn521,Pn526,Pn527,Pn703,Pn704 قابل کپی کردن نمی باشند.



فصل چهارم: تنظیمات مربوط به انتخاب موتور و انکدر برای محورها

در درایو سری ETS این امکان وجود دارد که برای هر محور، موتور با توانهای مختلف انتخاب گردد. طبق تنظیمات زیر میتوانیم برای هر محور توان موتور آن محور را انتخاب کنیم.

شرکت مهندسی با **ار ک** س بازرگانی ۲۰۱۰ د د د مالی مر

		مقدار	مقدار
مدل موتور	MOTOR TYPE CODE	پارامتر Pn840	پارامتر Pn005.3
	EMJ-01APA22		
	EMJ-01APB22		
	EMJ-02APA22		
	EMJ-02APB22		
	EMJ-02APA24		
	EMJ-02APB24		
	EMJ-02APA22-WR	П 0000	
	EMJ-02APB22-WR		
	EMJ-02APA24-WR		
	EMJ-02APB24-WR		
	EMJ-04APA22		
	EMJ-04APB22		
	EMJ-04APA24		
	EMJ-04APB24	11.01.06	
	EMJ-04APA22-WR	H 0100	
	EMJ-04APB22-WR		
ENAL	EMJ-04APA24-WR		
EIVIJ	EMJ-04APB24-WR		
	EMJ-08APA22		
	EMJ-08APB22		
	EMJ-08APA24		
	EMJ-08APB24	11.0200	
	EMJ-08APA22-WR	H 0206	
	EMJ-08APB22-WR		
	EMJ-08APA24-WR		
	EMJ-08APB24-WR		
	EMJ-10APA22		
	EMJ-10APB22		
	EMJ-10APA24		
	EMJ-10APB24	11.0206	
	EMJ-10APA22-WR	П 0306	
	EMJ-10APB22-WR		
	EMJ-10APA24-WR		
	EMJ-10APB24-WR		
	EMG-10APA22	Ц 0206	
EMG	EMG-10APA24	H 1000	
	EMG-10APB22		H 1000
	EMG-10APB24	H 03 <b>1</b> 6	
	EML-10APA22	H 0306	
EML	EML-10APA24		
	EML-10APB22		H 2
	EML-10AP <mark>B</mark> 24	— Н 03 <b>1</b> 6	

نکته: پس از تنظیم این پارامترها، باید فانکشن Fn001 را اجرا کنید. نکته قابل توجه این است که برای اجرای این فانکشن باید سرو در حالت S-OFF باشد(On00.0=0).



فصل ینجم : استفاده از فانکشن JOG در مدهای کنترلی مختلف

در ورژن استاندارد سرو درایوهای PRONET، فانکشن JOG فقط از طریق ورودی دیجیتال و پنل اپراتوری درایو امکانپذیر بود. اما در ورژن جدید سرو درایوهای PRONET ( IR ) و ETS، این فانکشن در تمام مدهای کنترلی و از سه طریق قابل اجراست که در ادامه به شرح آن پرداخته می شود.

## 1-۵) فانکشن JOG با استفاده از پنل اپراتوری

از طریق پنل اپراتوری و با استفاده از Fn002 می توان این فانکشن را اجرا کرد.



نمايش	توضيحات	رديف
	با استفاده از کلید AXIS ، گروه پارامترهای محور مورد نظر را انتخاب می کنیم.	١
En888	با استفاده از کلید MODE توابع کمکی را در صفحه نمایشگر انتخاب مینماییم.	۲
Fn882	با استفاده از کلیدهای INC و DEC شماره تابع مورد نظر را انتخاب مینماییم.	٣
E.B <b>88</b> 6	با فشار کلید ENTER عبارت زیر بر روی نمایشگر به نمایش در می آید.	۴
<b>.  8</b> 6	حال با استفاده از فشار کلید MODE سروموتور را فعال مینماییم.	۵
	سپس با استفاده از کلیـدهایINC و DEC مـی تـوانیم سـرومو تور را بـه چـپ و راسـت	۶
	بچرخانیم. Moter forward rotation Motor reverse rotation	
Fn882	با فشار کلید ENTER دوباره به مدهای اصلی باز می گردیم.	٧

**نکته :** سرعت موتور در مد JOG در Pn305 تعیین می گردد. لازم به ذکر است کنترلر خارجی هیچ نقشی در مد JOG ایفا نمی کند و این تست هم زیر بار و هم بدون بار می تواند صورت گیرد.



**JOG با استفاده از ورودی های دیجیتال** 

با تعریف دو ورودی دیجیتال به عنوان JOGP ( راستگرد ) و JOGN ( چپگرد ) می توان از این فانکشن استفاده کرد. برای تعریف این دو ورودی می بایست به پارامترهای Pn711 و Pn712 رجوع کرد. لازم به ذکر است که مقدار پارمترهای Pn711 و Pn712 به صورت هگزادسیمال است و همانطور که در شکل مشاهده می شود حرف H بیانگر این موضوع می-باشد. در شکل زیر موقعیت بیتها مشخص شدهاند.

	3	2	1	0
H	8	B		

	مقادیر پیش	شماره	the source lab	شماره پایه
	فرض در هر بیت	بيت	پارانىدو نىربوغە	ورودى
0 : Refer to Pn509 & Pn510	0	0	Pn711.0	CN1-14
1 : GEAR 1	0	1	Pn711.1	CN1-15
2 : GEAR 2	0	2	Pn711.2	CN1-16
3 : JOGP	0	3	Pn711.3	CN1-17
4 : JOGN	0	0	Pn712.0	CN1-39
5 : S-P(Switch Mode)	0	1	Pn712.1	CN1-40
6 : Position 1	0	2	Pn712.2	CN1-41
7 : Position 2	0	3	Pn712.3	CN1-42
8 : Position 3				
9 : Position 4				
F : Disable inputs function				

## ۵-۳) فانکشن JOG با استفاده از شبکه ارتباطی Modbus

با استفاده از آدرس های مدباس مطابق جدول زیر، اجرای فانکشن JOG قابل اجرا میباشد.

توضيحات	محورA	محورB	محور C	نحوه عملكرد	امکان دسترسی
Jog Servo Enable	1023	3023	4023	00: Jog Servo OFF 01: Jog Servo ON	Write Only
Jog FWD Rotation	1024	3024	4024	00: Stop 01: Forward Rotation	Write Only
Jog REV Rotation	1025	3025	4025	00: Stop 01: Revere Rotation	Write Only

نکته 1: امکان JOG با استفاده از ورودی های دیجیتال و یا شبکه Modbus در تمامی مدهای کنترلی دارای بالاترین اولویت می باشند به عنوان مثال در مد کنترل External Position، در حالیکه سرو درایو با دریافت پالس از کنترلر در حال حرکت است، اگرهر یک از ورودی های دیجیتال JOGP یا JOGN فعال شوند، موتور بدون توجه به پالس های دریافتی حرکت JOG را با سرعت تعیین شده در پارامتر Pn305 اجرا می کند و پالس های دریافتی در مدت اجرای JOG نادیده گرفته می شوند.



نکته ۲: برای استفاده از فانکشن JOG از طریق Modbus در محور A، ابتدا باید با استفاده از آدرس H =1 1023 مد JOG را فعال نمود و سپس با استفاده از آدرس های (JOG FWD یا 1024H=1(JOG REV یا JOG REV) حرکت JOG را اجرا نمود.

فصل ششم: مد کنترلی Internal Position

#### ۱-۶) مقدمه

در این مد کنترلی می توان یک کنترلر داخلی برای سرودرایو تعریف نمود، کنترلری که از ۱۶ مرحله حرکتی مختلف شامل سرعت، جهت، مقدار حرکت و زمانهای شتاب و توقف تشکیل شده باشد. این دستورالعمل در ۶ بخش مختلف تنظیم شده است و تمامی قابلیتهایی که در این مد کنترلی مورد نیاز کاربر میباشد در آن لحاظ شده است.

### ۲-۶) تنظيمات اوليه

تنظیمات این مد به طور کامل در جدول زیر آمده است و در بخش های بعدی به ذکر نکات مهم دیگری در این مد کنترلی پرداخته می شود.

توضيحات	پارامتر
تعيين مد كنترلي	Pn005.1=5
تعیین کننده مسافت حرکتی سرومو تور از مرحله اول تا مرحله شانزدهم میباشد.	
تعیین کننده 16 موقعیت مختلف از لحاظ میزان چرخش میباشند، که هر ۲ پارامتر، تعیین کننده یک موقعیت می-	
باشند. به عنوان مثال پارامتر Pn600 موقعیت با دقت ۱۰۰۰۰ پالس و Pn601 موقعیت با دقت ۱ پالس را	
مشخص می کند که مجموع این دو پارامتر مقدار یک مرحله حرکت را تعیین می کنند. عدد مثبت در این	Pn600~Pn631
پارامترها بیانگر حرکت راستگرد و عدد منفی بیانگر حرکت چپگرد است.	
تعیین کننده سرعت مربوط به مراحل 15 ~ 0 در واحد RPM میباشد.	Pn632~Pn647
تعيين كننده زمان شيب استارت و استپ هر يك از مراحل 15 ~ 0 ميباشد.	Pn648~Pn663
تعيين كننده زمان توقف بين هر يك ازمراحل 15 ~ 0 ميباشد.	Pn664~Pn679
تعیین کننده شماره مرحله شروع و انتهای برنامه عملکرد موتور میباشد.	Pn683,Pn684

	مهندسی بازرگانی ارکید دنیا
[0] : بعد از فعال شدن پایه ورودی S-ON مراحل به صورت چرخشی اجرا میشود.	
[1] : با هر بار فعال شدن پایه ورودی P-CON هر مرحله یکبار اجرا میشود.	
[2] : بعد از فعال شدن پایه ورودی S-ON مراحل به صورت چرخشی اجرا نمی شود و برای اجرای مراحل نیاز	Pn681.1
به فعال بودن پایه ورودی PCL میباشد.	H.==0=
[3] : با ورودی P-CON مراحل اجرا میشوند و با پایه PCL قبل از رسیدن به موقعیت متوقف میشوند.	
[0] : پایه ورودی P-CON حساس به سطح	Pn681.2
[1] : پایه ورودی P-CON حساس به لبه بالا رونده	H.o 0oo

## ۳-۳) نحوه اعمال ورودی Emergency Stop در مد Internal Position

برای استفاده از این حالت ابتدا باید پارامتر Pn681.1 را روی مقدار 3 قرار دهید. روش کار به این صورت است : زمانی که ورودی P-CON فعال شود، موقعیت تعریف شده اجرا نمی شود و باید ابتدا ورودی PCL فعال شود، سپس با ورودی -P CON موقعیت های تعریف شده اجرا می شود. نحوه استفاده از این حالت در شکل زیر مشخص شده است. نکته مهم در این حالت این است که پس از شروع مجدد، مرحله قبلی از ابتدا آغاز می شود و امکان شروع از همان موقعیتی که در آن متوقف شده است وجود ندارد. پارامترهایی که باید تنظیم شود :

## Pn681 = 0030

Pn510 = 7654 (CN1-16 = 6) (Factory setting)



**نکته:** در حالتی که Pn681.1 روی عدد 3 تنظیم می شود، ورودی NCL به عنوان ورودی Homing عمل می کند. به طوری که با فعال کردن این ورودی پروسه Homing اجرا می شود و موتور شروع به حرکت می کند و با برخورد به میکروسوییچ NOT در خلاف جهت حرکت کرده و با دریافت اولین پالس Z متوقف می شود.

## P-CON) تغییر حالت پایه ورودی P-CON

یکی دیگر از قابلیت ها در این مد کنترلی تغییر وضعیت پایه ورودی P-CON از حالت حساس به سطح به حالت حساس به لبه بالارونده است. برای استفاده از این حالت اگر پارامتر Pn681.2 روی مقدار 1 قرار داده شود پایه ورودی P-CON حساس به لبه بالارونده خواهد شد. فرض می کنیم از 16 موقعیت قابل تعریف فقط از یک موقعیت استفاده کرده ایم. حال اگر حالت پایه ورودی P-CON حساس به سطح باشد ( 0 = Pn681.2 ) تا مادامی که این ورودی فعال است این موقعیت دائماً اجرا می شود. ولی اگر حالت پایه ورودی P-CON حساس به لبه بالارونده باشد( 1 = Pn681.2 ) برای هر بار اجرا شدن این موقعیت باید ورودی P-CON فعال شود. در شکل های زیر حالت های مختلف مشخص شده است.







**۵-8) استفاده از تایمر داخلی جهت تغییر مراحل (بدون نیاز به پایه ورودی P-CON)** 

قابلیت دیگری که در این مد کنترلی وجود دارد تغییر موقعیتهای تعریف شده به صورت چرخشی می باشد و همچنین تنظیم زمان توقف بین مراحل نیز در این حالت وجود دارد. پارامترهای Pn664~ Pn664 مربوط به زمان توقف بین مراحل 15~0 می باشد و پارامترهای Pn683 و Pn684 تعیین کننده شماره مرحله شروع و انتهای برنامه است. حالت چرخشی مراحل به دو صورت می تواند انجام شود. اگر پارامتر 0 = Pn681.1 باشد، پس از وصل ورودی S-ON مراحل تعریف شده به صورت چرخشی انجام می شود و همچنین زمان توقف بین مراحل قابل تعریف می باشد. حالت بعدی زمانی است که پارامتر 2 = Pn681.1 باشد. در این حالت مراحل پس از فعال شدن ورودی Pn681.1 بعدی زمانی است که پارامتر که این ورودی فعال است این مراحل اجرا می شوند. لازم به ذکر است که زمان توقف بین مراحل در این حالت نیز قابل تعریف می باشد.

**نکته :** اگر در حین کار ورودی S-ON یا ورودی PCL غیر فعال شود پس از شروع مجدد، مراحل از ابتدا آغاز می شود.

# ۶-۶) حالت کاری Incremental و Absolute قابلیت دیگری که در این مد کنترلی وجود دارد حالت کاری Incremental و Absolute است که توسط پارامتر Pn682 تنظیم می شود که در این قسمت به شرح این دو حالت می پردازیم.

حالت کاری Incremental ( Pn682 = 0 ) :

فرض می کنیم تمام اعداد تنظیم شده در موقعیتهای مختلف مثبت هستند. هرگاه هر کدام از موقعیتهای قابل تعریف( 16 حالت) اجرا شود سروموتور به همان میزان حرکت کرده و اگر در مد مانیتورینگ درایو Un009 و Un010 مشاهده شود میزان پالسی که سروموتور حرکت می کند دائماً در حال افزایش است. برای درک بهتر مطلب به مثال زیر توجه نمایید.

مثال : در این مثال ۳ موقعیت در Pn603 ، Pn603 و Pn605 و Pn605 و با سرعتهای مختلف تعریف شده است که مقادیر آنها به شرح زیر است. با توجه به شکل زیر پس از اتمام موقعیت سوم عدد 300 در Un009 قابل مشاهده است و این عدد در شروع مجدد افزایش می یابد.

موقعيت اول : ( pulse ) / Pn601 = 100 ( pulse / سرعت : ( Pn632 = 1000 ( rpm

موقعيت دوم : ( pulse ) = 500 ( rpm / سرعت : ( Pn603 = 500 ( rpm

موقعيت سوم : ( pulse ) = 1500 ( rpm / سرعت : ( Pn605 = 1500 ( rpm


حالت کاری Absolute ( Pn682 = 1 )

فرض می کنیم تمام اعداد تنظیم شده در موقعیتهای مختلف مثبت هستند. هرگاه هر کدام از موقعیتهای قابل تعریف ( 16 حالت ) اجرا شود سرو دقیقاً به همان موقعیت میرود. اگر Un009 و Un010 پس از انجام هر مرحله دیده شود مقدار آن با مقدار تعریف شده برای آن مرحله برابر است. برای درک بهتر مطلب به مثال زیر توجه نمایید.

مثال : در این مثال ۳ موقعیت با سرعت های مختلف تعریف شده است که تنظیمات آن مانند مثال قبل میباشد. با توجه به شکل زیر ابتدا مرحله شماره ۱ ( موقعیت اول ) اجرا می شود و سروموتور به موقعیت پالس 100 می رود. در مرحله شماره ۲ (موقعیت دوم ) سروموتور به موقعیت پالس 50 می رود. در مرحله شماره ۳ ( موقعیت سوم ) سرو به موقعیت پالس 150 می رود. پس از اتمام این سه مرحله در شروع مجدد مرحله شماره ۴ ( موقعیت اول ) اجرا می شود و سروموتور به موقعیت 100 می رود. پس از آن این حرکت بین مراحل شماره ۲، ۳ و ۴ به صورت متناوب تکرار می شود. ( در شکل زیر جهت فل ش ها، مسیر حرکت سروموتور را مشخص می کند.)





**نکته ۱**: در حالت Absolute اگر سروموتور قبل از رسیدن به موقعیت متوقف شود برای شروع مجدد از همان موقعیتی که در آن متوقف شده است حرکت را آغاز می کند.

نکته ۲: زمانی که پارامتر Pn682 از حالت ( O ) Incremental به حالت ( I ) Absolute تغییر می یابد اگر عددی که در کانتر درایو وجود دارد ( Current Position ) و در Un009 و Un010 دیده می شود صفر نباشد، سرومو تور فورا در جهت راستگرد یا چپگرد ( بستگی به علامت عدد موجود در کانتر درایو دارد ) حرکت کرده و در موقعیت صفر متوقف می شود.

۶-۷) استفاده از یایه (CLR (Clear)

اگر در حین حرکت سروموتور به سمت یکی از موقعیت های تعریف شده این پایه فعال شود سروموتور فوراً متوقف می شود و تا زمانی که این پایه فعال است، پالس های ارسالی که از Pulse Generator داخل درایو تولید شده و باعث حرکت می شود، در نظر گرفته نمی شود. پس از غیر فعال شدن پایه CLR پالس های تولیدی دریافت شده و مراحل اجرا می-شود. این حالت در شکل زیر مشخص شده است. در این شکل فرض شده است که فقط یک موقعیت تعریف شده است (Pn600) و پس از فعال شدن پایه SON این مرحله به صورت متناوب اجرا می شود.



۸-۶) تعریف یک ورودی دیجیتال به عنوان Pause (توقف موقت)

با تعریف یک ورودی دیجیتال به عنوان ورودی Pause می توان سروموتور را در هنگام حرکت به سمت موقعیت های تعریف شده به صورت موقت متوقف کرد. بدین صورت که با هر بار فعال شدن این ورودی حرکت سروموتور متوقف شده و با غیر فعال شدن این ورودی سروموتور از همان موقعیتی که در آن متوقف شده است به حرکت خود ادامه می دهد. همچنین اگر این ورودی بین زمان توقف میان موقعیت ها فعال گردد، تا مادامی که ورودی Pause فعال باشد سروموتور متوقف است و پس از طبی زمان توقف تعریف شده و به محض غیر فعال شدن ورودی، سروموتور موقعیت بعدی را اجرا می کند. در شکل زیر فرض شده است که فقط یک موقعیت تعریف شده است (Pn600) و این موقعیت برابر با 2500 می-



باشد. با فعال شدن ورودی Pause سروموتور در موقعیت 500 متوقف شده و با غیر فعال شدن این ورودی سروموتور از همان موقعیت 500 حرکت خود را آغاز میکند. همانطور که در شکل زیر مشاهده می شود ورودی Pause هنگام زمان توقف بین Stepها نیز فعال شده است و چون زمان تعریف شده در پارامتر Pn664 از زمان فعال ماندن ورودی Pause کمتر بوده است، به محض غیر فعال شدن این ورودی موقعیت بعدی اجرا می شود.

پارامترهایی که برای تعریف پین شماره 14 به عنوان ورودی Pause باید تنظیم شود :



Pn510 = 765B (CN1-14 = B)

### فصل هفتم: انتخاب 16 موقعیت در مد Internal Position با ۴ ورودی دیجیتال

در مد کنترلی Internal Position می توان یک کنترلر داخلی برای سرودرایو تعریف نمود، کنترلری که از ۱۶ مرحله حرکتی مختلف (15 ~ 0) شامل سرعت، جهت و مقدار حرکت، زمان های شتاب و توقف تشکیل شده است. در ورژن استاندارد درایوهای سری Pronet، دو گزینه برای اجرای این 16 مرحله وجود داشت:

۱- اجرای مراحل به صورت چرخشی با زمان و بدون نیاز به ورودی دیجیتال
 ۲- اجرای مراحل با استفاده از ورودی دیجیتال P-CON، اما گزینه ای برای انتخاب مراحل وجود نداشت و مراحل 16
 ۲- اجرای مراحل با استفاده از ورودی دیجیتال B-CON، اما گزینه ای برای انتخاب مراحل وجود نداشت و مراحل 16
 ۳- اجرای مراحل با استفاده از ورودی دیجیتال B-CON، اما گزینه ای برای انتخاب مراحل وجود نداشت و مراحل 16
 ۳- اجرای مراحل با استفاده از ورودی دیجیتال B-CON، اما گزینه ای برای انتخاب مراحل وجود نداشت و مراحل 16
 ۳- اجرای مراحل با استفاده از ورودی دیجیتال B-CON، اما گزینه ای برای انتخاب مراحل وجود نداشت و مراحل 16
 ۳- اجرای مراحل با استفاده از ورودی دیجیتال B-CON، اما گزینه و می باشد. برای استفاده از این فانکشن میمده است که انتخاب 16 مرحله با استفاده از 4 ورودی دیجیتال سرو درایو می باشد. برای استفاده از این فانکشن میبایست به ترتیب زیر عمل کرد.



ابتدا باید 4 ورودی دیجیت ال را به عنوان موقعیت 1 ( Position 1 ) ، موقعیت 2 ( Position 2 ) ، موقعیت 3 ( Position 3 ) ، موقعیت 3 ( Position 3 ) ، موقعیت 3 ( Position 3 ) و موقعیت 4 ( Position 4 ) تعریف کرد. برای تعریف این چهار ورودی می بایست به پارامترهای Pn711 و Pn712 رجوع کرد که این دو پارامتر در ورژن جدید به پارامترهای سرو درایو اضافه شده اند.

مقادد قادا تعريف دم هر در. ت	مقادیر پیش	شماره	these states	شماره پایه
	فرض در هر بیت	بيت	پارانىدو نىربوغە	ورودى
0 : Refer to Pn509 & Pn510	0	0	Pn711.0	CN1-14
1 : GEAR 1	0	1	Pn711.1	CN1-15
2 : GEAR 2	0	2	Pn711.2	CN1-16
3 : JOGP	0	3	Pn711.3	CN1-17
4 : JOGN	0	0	Pn712.0	CN1-39
5 : S-P(Switch Mode)	0	1	Pn712.1	CN1-40
6 : Position 1	0	2	Pn712.2	CN1-41
7 : Position 2	0	3	Pn712.3	CN1-42
8 : Position 3				
9 : Position 4				
F : Disable inputs function				

لازم به ذکر است که مقدار پارمترهای Pn711 و Pn712 به صورت هگزادسیمال است و همانطور که در شکل مشاهده میشود حرف H بیانگر این موضوع میباشد. در شکل زیر موقعیت بیتها مشخص شدهاند.

	3	2	1	0
H	8	B		B

۲-۲) فعالسازی فانکشن

برای فعال شدن این فانکشن باید پارامتر Pn681.3 را از صفر به یک تغییر داد. Pn681.3 = 1

۳–۷) **تعیین مقادیر موقعیتها** مقادیر موقعیتها از طریق پارامترهای Pn631 ~ Pn600 تعیین می گردد که به ترتیب موقعیت 1 تا 16 را تشکیل میدهند. در جدول زیر نحوه عملکرد این فانکشن مشخص شده است.

Digital Input4(9 )	Digital Input3(8)	Digital Input2(7)	Digital Input1(6)	Parameter
0	0	0	0	Pn600,601
0	0	0	1	Pn602,603
0	0	1	0	Pn604,605
0	0	1	1	Pn606,607
0	1	0	0	Pn608,609
0	1	0	1	Pn610,611
0	1	1	0	Pn612,613
0	1	1	1	Pn614,615
1	0	0	0	Pn616,617
1	0	0	1	Pn618,619
1	0	1	0	Pn620,621
1	0	1	1	Pn622,623
1	1	0	0	Pn624,625
1	1	0	1	Pn626,627
1	1	1	0	Pn628,629
1	1	1	1	Pn630,631

شرکت مهد

rkid

در این قسمت برای آشنایی بهتربا عملکرد این فانکشن یک مثال کاربردی از این فانکشن آورده شده است. همانطور که در شکل زیر مشخص شده است، میخواهیم با استفاده از 4 ورودی دیجیتال به موقعیت های مختلف دست پیدا کنیم. لازم به ذکر است که پس از انتخاب موقعیت مورد نظر از بین ۱۶ موقعیت موجود با استفاده از ۴ ورودی دیجیتال، برای اجرای هر موقعیت از ورودی دیجیتال PCON استفاده شده است.

Pn600 = 10 Pn614 = -10 Pn630 = 20 Pn606 = 30





## در جدول زیر نحوه اجرای نمودار فوق آورده شده است:

	ورودی های دیجیتال				
مقادير	Digital Input 4(9)	Digital Input 3(8)	Digital Input 2(7)	Digital Input 1 (6 )	پارامتر
10	0	0	0	0	Pn600,601
30	0	0	1	1	Pn606,607
-10	0	1	1	1	Pn614,615
20	1	1	1	1	Pn630,631

فصل هشتم: مد كنترلي External Position

تنظیمات این مد به طور کامل در جدول زیر آمده است و در ادامه به ذکر نکات مهم دیگری درباره ایـن مـد کنترلـی پرداختـه می شود.

تنظیمات اولیه جهت مد کنترلی (External Psition( Pulse Train
دراین حالت با ارسال پالس توسط کنترلر خارجی مانند PLC، می توان حرکت سروموتور را کنترل نمود.
سرعت چرخش سروموتور برحسب rpm = (رزولیشین انکدرموتور ) / ( فرکانس پالس ارسالی کنترلر × 60 )
میزان حرکت سرومو تور = ( دقت انکدر) / ( تعدادپالس ارسالی کنترلر )

	مهندسی بازرگانی ارکید دنام ۲۰۰۰ میر
توضيحات	پارامتر
تعيين مد کنترلي سرودرايو	Pn005.1=1
تعيين كننده مد پالس ورودي به سرودرايو	Pn004.2
این پارامتربه منظور اطمینان از دریافت صحیح پالس های ارسال شده از کنترلر، در ورودی پالس	
سرودرایو در فرکانس های مختلف استفاده می شود. از آنجایی که در سری ETS ورودی پالس تا	
فرکانس 700KHZ قابل دریافت است، باتنظیم این پارامتر، فیلتراسیون مناسب در ورودی پالس	
اعمال مي گردد.	
اگر Pn840.0=6 باشد یعنی انکدر موتور از نوع افزایشی 2500 پالس باشد و این پارامتر را	Pn006.3
باید به صورت زیرتنظیم نمایید.(درایوسری ETS <b>)</b> :	
زمانی که فرکانس پالس ورودی سرودرایو کمتر از 700KHZ میباشد: [ <mark>0</mark> ]	
زمانی که فرکانس پالس ورودی سرودرایو کمتر از 200KHZ میباشد: [ <b>1</b> ]	
زمانی که فرکانس پالس ورودی سرودرایو کمتر از 60KHZ میباشد: [ <mark>2</mark> ]	
گین حلقه سرعت، با افزایش این پارامتر(حداکثر تا مقدار 1000) دقت کنترل سرعت افزایش می یابد.	Pn102
ثابت زمانی انتگرال حلقه سرعت، بـا کـاهش ايـن پارامتر(حـداقل تـا مقـدار 50) دقـت کنتـرل سـرعت	Dp102
افزایش می یابد.	P11103
گین حلقه موقعیت، با افزایش این پارامتر(حداکثر تـا مقـدار 100) دقـت کنتـرل Position افـزایش	Dp104
مى يابد.	FIII04
از تقسیم مقدار تعیین شده در Pn201 بر Pn202نسبت ضریب گیربکس الکترونیکی تعیین	Pn201,
مىشود.	FIIZUZ
این ضریب روی سرعت وموقعیت سروموتور تاثیر می گذارد.	
خروجی نشانگر تثبیت موقعیت (COIN/) که پس از رسیدن به موقعیت مـورد نظر فعـال مـی گـردد و	
مطابق شکل زیر محدوده موقعیت، توسط Pn500 تعیین می گردد.	
Speed Servomotor speed	
Pn500	Pn500
Error pulse (Un011,Un012)	
(CN1-11,12)	



برای اعمال پالس به سرودرایو از طریق PLC یا کنترلرهای مختلف باید اتصالات سخت افزاری به صورت شکلهای زیرسیم-بندی شود.



اتصال به صورت Open Collector



rkid

### فصل نهم: پروسه Homing داخلی درایو

پروسه Homing در درایو جدید ETS همانند ورژن استاندارد می باشد با این تفاوت که این پروسه در ورژن استاندارد فقط در مد کنترلی External Position فعال بود، اما در ورژن جدید ETS در تمام مدهای کنترلی به غیر از مد Speed این پروسه فعال است. همچنین پارامتر سرعت اجرای آفست ( Pn692 ) نیز در ورژن جدید به پروسه Homing اضافه شده است.

**Homing**) تنظيمات جهت استفاده از يروسه

توضيحات	پارامتر
[0]: فانکشن Homing غیرفعال است.	Pn689.2
[1]: فانکشن Homing فعال است.	
[0]: انجام پروسه Homing در جهت راستگرد	Pn689.0
[1]: انجام پروسه Homing در جهت چپ گرد	
[0]: تغییر جهت حرکت پس از برخورد با میکروسوییچ ORG	Pn689.1
[1]: عدم تغییر جهت حرکت پس از برخورد با میکروسوییچ ORG	
تعیین کننده میزان آفست پس از انجام پروسه Homing	Pn690,
Pn690 : آفست Homing با دقت 10000 پالس	Pn691 Pn692
Pn691 : آفست Homing با دقت 1 پالس	
Pn692 : سرعت اجرای آفست در واحد RPM	
Pn685 : سرعت حركت سروموتور هنگام حركت به سمت ميكروسوييچ ORG	Pn685,
Pn686 : سرعت حرکت سروموتور پس از برخورد به میکروسوییچ ORG	Pn686



	توضيحات	پارامتر
	( CN1-10 ) : Pn509.0	Pn509,
رودي بايد به صورت دلخواه انتخاب شده و بـه	CN1-11 ) : Pn509.1 ( دو و	Pn510
ت زیر تنظیم شود. برای مثال :	CN1-12 ) : Pn509.2 (	
) استارت ( Pn510.2 : D ( SHOM	( CN1-13 ) : Pn509.3 فرمان	
و سوئيج ( Pn510.3 : E ( ORG	( CN1-14 ) : Pn510.0	
	( CN1-15 ) : Pn510.1	
	( CN1-16 ) : Pn510.2	
	( CN1-17 ) : Pn510.3	
	( CN1-7,CN1-8 ) : Pn511.0	Pn511
می تـوان یکـی از خروجـیهـا را بـه عنـوان	( CN1-1,CN1-2 ) : Pn511.1	
خروجی Homing تعریف نمود. بـرای	( CN1-5,CN1-6 ) : Pn511.2	
مثال :	پس از اتمام پروسه Home، درایو میتواند یکی از	
فيدبك اتمام پروسه ) Pn511.2 : 8	خروجیهای دیجیتال را به عنوان فیدبک اتمام پروسه	
HOME )	homing فعال كند.	
است کنید و از این فلگ به در برنامه استفاده	توصیه میشود که با این خروجی یک Flag را در PLC	
	نماييد.	

نکته ۱ : میکروسوییچ ORG حتماً باید به صورت Normally Close بسته شده باشد. نکته ۲ : پس از تنظیم پارامتر Pn689 باید تغذیه درایو قطع و سپس وصل شود تا تغییرات اعمال شود. نکته ۳ : پروسه Homing با لبه پایین رونده سیگنال SHOM شروع می شود( قابل تغییر به لبه بالارونده با استفاده از پارامترهای Pn516 و Pn517 که سطح منطقی ورودی دیجیتال را Inverse می کند.) در این قسمت برای انجام پروسه Homing دو مثال مختلف این پروسه به همراه تنظیمات پارامترها و شکلهای مربوطه برای درک بهتر مطلب آورده شده است. مثال ۱ : می خواهیم با فعال کردن ورودی SHOM سروموتور با سرعت Mormally در جهت راستگرد حرکت کرده و با برخورد به میکروسوییچ ORG در جهت معکوس با سرعت 30 RPM حرکت کند و با دریافت اولین پالس Z به میزان 2500 پالس جلو رفته و سپس متوقف شود.

شرکت مهندسی بازرگان

Pn689 = 0100 Pn690 = 2 Pn691 = 500 Pn685 = 200 rpm Pn686 = 30 rpm Pn510 = ED54 (CN1-16 = SHOM, CN1-17 = ORG)



Pn689 = 0110 Pn690 = 2 Pn691 = 500 Pn685 = 200 rpm Pn686 = 30 rpm Pn510 = ED54 (CN1-19 = SHOM, CN1-1y = ORG)

شركت مهند rkid



عدم تغییر جهت حرکت بعد از بر خورد با لیمیت سویچ org در پروسه homing

## فصل دهم: مد كنترلى (Parameter Reference) فصل دهم:

تنظيمات اين مد به طور كامل در جدول زير آمده است.

توضيحات	پارامتر
تعیین مد کنترلی سرودرایو	Pn005.1=0
تعیین کننده سرعت در واحد RPM میباشد.	Pn304
تعیین کننده زمان شیب استارت و استپ میباشد.	Pn306 Pn307
در این حالت منحنی زمان ACC/DCC بصورت خطی اعمال می گردد.	Pn310=0

در شکل زیر حالتهای مختلف مشخص شده است.



فصل یازهم: مد کنترلی (Contact Reference)

۱۱–۱)مد کنترلی Speed Control (Contact Reference) ↔Speed Control (zero Reference)

با استفاده از سه پایه ورودی N-CL, P-CL, P-CON برای انتخاب ۷ سرعت مختلف که در پارامترها تنظیم شده، می توان سرعتهای داخلی را به صورت جدول زیر تعیین نمود. اگر Pn005.1=2 باشد، با غیر فعال بودن هر سه ورودی مذکور، موتور متوقف شده و شافت موتور قفل می شود.

	Input Signal		
/P-CON	/P-CL	/N-CL	Speed
	OFF(H)	OFF(H)	Speed control (zero reference)
	OFF(H)	ON(L)	SPEED1
OFF(H)	ON(L)	OFF(H)	SPEED2
	ON(L)	ON(L)	SPEED3
	OFF(H)	OFF(H)	SPEED4
	OFF(H)	ON(L)	SPEED5
ON(L)	ON(L)	OFF(H)	SPEED6
	ON(L)	ON(L)	SPEED7

Note: OFF= High level; ON= Low level



#### servodrive



۲-۱۱) مد کنترلی

### Speed Control (Contact reference) ↔ Position Control (Pulse Train)

در مد کنترلی External Position و از ۲ مدکنترل Speed و External Position را دارد. به این مفهوم که اگر هر سه ورودی N-CL, P-CL, P-CON غیرفعال باشد، درایو در مد کنترلی (Position Control Pulse train قرار N-CL, P-CL, P-CON می گیرد. در غیر این صورت برای انتخاب ۷ سرعت مختلف که در پارامترها تنظیم شده، با استفاده از سه ورودی N-CL, P-CL, P-CON می گیرد. در غیر این صورت برای انتخاب ۷ سرعت مختلف که در پارامترها تنظیم شده، با استفاده از سه ورودی CL, P-CON برای و ایس می گیرد. در غیر این صورت برای انتخاب ۷ سرعت مختلف که در پارامترها تنظیم شده، با استفاده از سه ورودی N-CL, P-CL, P-CON برای این مود. و ایس می گیرد. در غیر این صورت برای انتخاب ۷ سرعت مختلف که در پارامترها تنظیم شده، با استفاده از سه ورودی N-CL, P-CL, P-CON برای ایس می گیرد. در غیر این صورت برای انتخاب ۷ سرعت مختلف که در پارامترها تنظیم شده، ما استفاده از سه ورودی N-CL, P-CL, P-CON برای این مود.

### فصل دوازهم: سو يیچ بین مدهای کنترلی Position Control (Pulse Train) ↔ Position Control (Inhibit)

Pn005.1=4 Position Control (Pulse Train) ↔ Position Control (Inhibit) درصورت فعال بودن پایه ورودی P-CONدرایو به مد Inhibit رفته، شفت موتور قفل می شود و مادامی که این ورودی فعال باشد درایو پالس های دریافتی را دریافت نمی کند ودر صورت غیر فعال شدن پایه P-CON درایو پالس های ورودی را دریافت می کند.





۲-۱۲)سوییچ کردن بین مد کنترلی Internal Position و مد کنترلی Speed Control contact reference

Pn005.1=7 ←→ Speed Control (Contact reference) ↔ Internal Position

در سرو درایوهای ورژن استاندارد ، مد کنترلی Internal Position به هیچ کدام از مدهای کنترلی دیگر سوییچ نمی شد کـه در ورژن جدید ( IR ) ، به مد کنترلی Speed Control contact reference سوییچ می شود .

برای تغییر مد از Internal Position به مد کنترلی Speed Control contact reference بایـد Pn005.1=7 قرار گیرد و سپس با فعال و غیر فعال کردن پایه ورودی که به عنوان تغییر مد در پارامتر های Pn711,Pn712 انتخاب شـده اسـت میتوان بین این دو مد سوییچ کرد



فصل سيزدهم: 4عدد ضريب گيربكس الكترونيكي قابل انتخاب

در ورژن استاندارد سرو درایوهای PRONET، فقط ۲ عدد ضریب گیربکس الکترونیکی وجود داشت که مقدار آن در پارامترهای Pn201 و Pn203 تعیین می شد و از طریق ورودی دیجیتال P-CON قابل انتخاب بودند. اما در ورژن جدید ETS ، ۴ عدد ضریب گیربکس الکترونیکی وجود دارد که مقدار آن از طریق پارامترهای Pn201 ، Pn203 ، Pn207 ، ETS و Pn208 تعیین می شود و با استفاده از ۲ ورودی دیجیتال به صورت online قابل انتخاب می باشند. برای استفاده از این فانکشن می بایست به تر تیب زیر عمل کرد.

۱-۱۳) تعريف ورودىهاى ديجيتال

ابتدا باید دو ورودی دیجیتال را به عنوان ضریب گیربکس 1 : ( GEAR 1 ) و 2 : ( GEAR 2 ) تعریف کرد. برای تعریف این دو ورودی می بایست به پارامترهای Pn711 و Pn712 رجوع کرد که این دو پارامتر در ورژن ETS به لیست پارامترهای سرو درایو اضافه شدهاند.

مقاهد قلبا التعريف خداها دريت	مقادیر پیش	شماره	dtaar o violule	شماره پایه
ملادير قابل للريف در هر يك	فرض در هر بیت	بيت	پارانىدو ئىربوغە	ورودى
0 : Refer to Pn509 & Pn510	0	0	Pn711.0	CN1-14
1 : GEAR 1	0	1	Pn711.1	CN1-15
2 : GEAR 2	0	2	Pn711.2	CN1-16
3 : JOGP	0	3	Pn711.3	CN1-17
4 : JOGN	0	0	Pn712.0	CN1-39
5 : S-P(Switch Mode)	0	1	Pn712.1	CN1-40
6 : Position 1	0	2	Pn712.2	CN1-41
7 : Position 2	0	3	Pn712.3	CN1-42
8 : Position 3				
9 : Position 4				
F : Disable inputs function				

لازم به ذکر است که مقدار پارمترهای Pn711 و Pn712 به صورت هگزادسیمال است وهمانطور که در شکل مشاهده می-شود، حرف H بیانگر این موضوع میباشد. در شکل زیر موقعیت بیتها مشخص شدهاند.





۲-۱۳) فعالسازی ۴ گیربکس الکترونیکی

برای فعال شدن این فانکشن باید پارامتر Pn001.3 را از صفر به یک تغییر داد.

Pn001.3 = 1

## ۳-۱۳) تعیین مقادیر ضرایب گیربکس الکترونیکی مقادیر ضرایب گیربکس الکترونیکی از طریق پارامترهای Pn203 ، Pn203 ، Pn205 و Pn208 تعیین می گردد که به ترتیب ضریب 1 تا 4 هستند. در جدول زیر نحوه عملکرد این فانکشن مشخص شده است. لازم به ذکر است که با انتخاب هر یک از این ضرایب مطابق جدول زیر، ضریب مربوطه به صورت آنلاین درحرکت موتور اعمال می شود.

Input signal	Parameter	
Input 2 ( GEAR 2 )	Input 1 (GEAR 1)	
0	0	Pn201
0	1	Pn203
1	0	Pn207
1	1	Pn208

نکته ۱ : پس از تعیین مقادیر ضرایب گیربکس الکترونیکی پارامترهای Pn203 ، Pn203 ، Pn201 و Pn208 ، نیاز به قطع و وصل تغذیه درایو میباشد که برای هر محور قابل تنظیم است. در ورژن جدید ETS تغییر گیربکس الکترونیک فقط با تعریف و استفاده از ورودی های Gear1,Gear2 در پارامترهای Pn711,Pn712 قابل انجام است و ورودی P-CON حتی در صورت تعریف برای این کار، امکان تغییر گیربکس الکترونیکی را برای کاربر فراهم نمی کند. نکته ۲: نکته قابل توجه این است که ضرایب گیربکس الکترونیکی فقط در مد Position قابل استفاده میباشند.



۳-۱۳) تغییر آنلاین ضریب گیربکس الکترونیکی از طریق مدباس و با استفاده از یک پایه ورودی

در صورت نیاز به تغییر آنلاین ضریب گیربکس الکترونیکی باید برای هرمحور دوگیربکس الکترونیکی تعریف کرد. بدین ترتیب Gear1 برای محور A از تقسیم مقدار تنظیم شده در آدرس 851H بر850H می باشد و Gear2 برای محور A از تقسیم مقدار تنظیم شده در آدرس 852H بر 850H حاصل می گردد. مطابق تعریف فوق برای محور B داریم:

Gear1= $\frac{4851H}{4850H}$ , Gear2= $\frac{4852H}{4850H}$  د برای محور C داریم: Gear1  $\frac{4851H}{4850H}$  = Gear2  $\frac{2852H}{2850H}$ . این Gear2  $\frac{2852H}{2850H}$  - Gear2 می ایند از طریق مدباس مقداردهی شوند که در درایو ETS قابل استفاده است. شایان ذکر است که آدرسهای مذکور مثلاً برای محور اول معادل با (Pn202(850H),Pn203(852H),Pn201(851H) می باشند، به این مفهوم که آدرسهای محور اول معادل با (EEPRON) مذکور تاثیر مشابه پارامترهای فوق را دارند ولی مقادیر هریک مستقلاً در آدرس متفاوتی قرار دارند. ارسهای مدکور اول معادل با (EEPRON) مدکور تاثیر مشابه پارامترهای فوق را دارند ولی مقادیر هریک مستقلاً در آدرس متفاوتی قرار دارند. پر ایمترهای 2003–2004 می باشند، به این مفهوم که آدرسهای محود اول معادل با (EEPRON) مدکور تاثیر مشابه پارامترهای فوق را دارند ولی مقادیر هریک مستقلاً در آدرس متفاوتی قرار دارند. پر ایمترهای 1000–2003 می باشند، به این مفهوم که ایرامترهای 2003–2004 می باشند، به این مفهوم که آدرسهای عدور مقادیر از مشابه پارامترهای فوق را دارند ولی مقادیر هریک مستقلاً در آدرس متفاوتی قرار دارند. پر ایمترهای 1000–2003 مدکور تاثیر مشابه پارامترهای وقا را دارند ولی مقادیر هریک مستقلاً در آدرس متفاوتی قرار دارند. ولی آدرسهای 1000–2003 مدر حافظه ماندگار (EEPROM) مدر حافظه ماندگار (RAM) و ولی آدرسهای 1000–2003 هم سرعت بالاتری نسبت به حافظه ماندگار دارند که در حافظه می مرعت بالاتری نسبت به حافظه ماندگار دارند و نوشتن مقادیر از طریق شبکه 10000 هم سرعت بالاتری نسبت به حافظه ماندگار دارند و همچنین بر خلاف حافظه ماندگار، هیچ محدودیتی در تعدد خواندن و نوشتن از طریق در خاندن و نوشتن از طریق در از دارد.

#### فصل چهاردهم: Gantry کردن محورها

#### ۱-۱۴) مقدمه

درایوهای سری ETS که به صورت دو محور یا سه محور هستند این امکان را دارند که یک محور را بـه عنـوان Master و یک یا دو محور را به عنوان Slave تعریف کنیم. حتی در درایوهای ETS سه محور، می توانیم یک محور را Master و محور دوم را Slave تعریف کنیم و محور سوم به صورت مجزا کار کند. در بخشهای بعدی به ذکر نکـات مهـم دیگری در این مورد پرداخته می شود.

#### ۲-۱۴) مدهای کاری وتنظیمات اولیه

برای استفاده از مد Gantry در سرو درایوها باید از پارامتر Pn206 استفاده گردد. Pn206.0 مشخص می کند، کدام محور دارای ورودی پالس مرجع میباشد و یا کدام محور به عنوان Master انتخاب شده است. پارامتر Pn206.1مشخص کننده محورهایی است که باید از محور تعیین شده در Pn206.0تبعیت کنند. پارامتر Pn206.2 تعیین کننده نوع رفرنس محور های Slave است .

نکته قابل توجه این است که باید همه محورهای Slave در مـد (Pn005.1=1) External Position



پارامتر Pn206.2=1 طبق جدول زیر برای سنکرون کردن دو یا سه محور استفاده می شود و محورهای slave از فیدبک انکدر master تبعیت می کنند. نکته قابل توجه این است که این حالت Gantry در مد Position قابل استفاده می باشد.

ت پارامترها	تنظيماد		توضيحات
A axis	A axis		
Ph206.2	Ph206.1	Ph206.0	
	_	0	هر محور مجزا با مد CANOPEII یا PUISE می تواند راهانداری شود.
	0	1	محور A و B از ورودی محور A پالس می گیرند و محور C بصورت مجزا کار می کند.
	1	1	محور A و O از ورودی محور A پالس می دیرند و محور D بصورت مجرا کار می کند.
	2/3	1	همه محورها از ورودی محور A پالس می گیرند.
0	0	2	محور A و B از ورودی محور B پالس می گیرند و محور C بصورت مجزا کار می کند.
	2	2	محور B و C از ورودی محور B پالس می گیرند و محور A بصورت مجزا کار می کند.
	1/3	2	و ی همه محورها از ورودی محور B پالس می گیرند.
	1	3	محور A و C از ورودی محور C پالس می گیرند و محور B بصورت مجزا کار می کند.
	2	3	محور B و C از ورودی محور C پالس می گیرند و محور A بصورت مجزا کار می کند.
	0/3	3	همه محورها از ورودی محور C پالس می گیرند.

تنظیمات پارامترها A axis			توضيحات
Pn206.2	Pn206.2 Pn206.1 Pn206.0		
	-	0	هر محور مجزا با مد CANOpen يا Pulse مي تواند راه اندازي شود.
	0	1	محور A به عنوان Master و محور B به عنوان Slave میباشد و محور C بصورت مجزا کار می کند.
	1	1	محور A به عنوان Master و محور C به عنوان Slave میباشد و محور B بصورت مجزا کار می کند.
	2/3	1	محور A به عنوان Master و محور Bو C به عنوان Slave ميباشد.
1	0	2	محور B به عنوان Master و محور A به عنوان Slave میباشد و محور C بصورت مجزا کار می کند.
	2	2	محور B به عنوان Master و محور C به عنوان Slave میباشد و محور A بصورت مجزا کار می کند.
	1/3	2	محور B به عنوان Master و محور C و A به عنوان Slave میباشد.
	1	3	محور C به عنوان Master و محور A به عنوان Slave میباشد و محور B بصورت مجزا کار می کند.
			محور C به عنوان Master و محور B به عنوان Slave ميباشد و
	2	3	محور A بصورت مجزا کار می کند.
	0/3	3	محور C به عنوان Master و محور B و A به عنوان Slave میباشد.

نکته ۱: در استفاده از فانکشن Gantry در سری ETS به لحاظ عدم نیاز به استفاده از کانکتور CN1 در محورهای Slave ، در محورهای Gantry در صورتیکه در یکی از محورها آلارمی رخ دهد، آلارم هم درخروجی همان محور و هم در خروجی محور Master فعال می شود و تمامی محورها به حالت S-OFF می روند. همچنین با فعال کردن محور Master نروجی محور Slave فعال می شود و تمامی محورها به حالت S-OFF می روند. همچنین با فعال کردن محور او هم در با استفاده از ورودی S-ON ، متعاقباً محورهای Slave نیز Slave شده و با غیر فعال کردن ورودی مذکور، محورهای با استفاده از می در Slave ، متعاقباً محورهای Slave نیز Slave شده و با غیر فعال کردن ورودی مذکور، محورهای Slave نیز به حالت S-OFF می روند و این ویژگی در تمامی مدهای Gantry فعال می باشد. نکته ۲: در این مد امکان تغییر آنلاین ضریب گیربکس الکترونیکی از طریق مدباس و انتخاب ۴ گیربکس الکترونیکی از طریق ورودیهای دیجیتال بطوریکه در فصل ۱۱ مطرح شد نیز فراهم است.

فصل پانزدهم: فانکشنهای کاربردی متنوع

1-1) تعاریف جدید ورودیهای دیجیتال سرو درایو

در سرو درایوهای ورژن استاندارد، فقط پارامترهای Pn509 و Pn511 برای تعریف ورودیهای دیجیتال وجود داشت. اما در درایوهای جدید ETS ، دو پارامتر مشابه دیگر Pn711,Pn712 برای تعریف عملکرد ورودی های دیجیتال به درایو اضافه شده است و از آنجاییکه در هر سگمنت پارامترهای Pn509,510 بیش از ۱۵ فانکشن قابل تعریف نمی باشد، بنابراین در صورت نیاز به تخصیص تعاریف جدید اضافه شده به هر یک از ورودی های دیجیتال درایو، این تعاریف مطابق جدول زیر در پارامترهای Pn711,Pn712 تعریف می شوند.

مقادد قادا تعريف دمرهر دررت	مقادیر پیش	شماره	the so will be	شماره پایه
	فرض در هر بیت	بيت	پارانىدو نىربوغە	ورودى
0 : Refer to Pn509 & Pn510	0	0	Pn711.0	CN1-14
1 : GEAR 1	0	1	Pn711.1	CN1-15
2 : GEAR 2	0	2	Pn711.2	CN1-16
3 : JOGP	0	3	Pn711.3	CN1-17
4 : JOGN	0	0	Pn712.0	CN1-39
5 : S-P(Switch Mode)	0	1	Pn712.1	CN1-40
6 : Position 1	0	2	Pn712.2	CN1-41
7 : Position 2	0	3	Pn712.3	CN1-42
8 : Position 3				
9 : Position 4				
F : Disable inputs function				

**نکته :** در صورتی که هر بیت از Pn711 یا Pn712 صفر باشد، مرجع تعاریف ورودی دیجیتال معادل آن بیت، پارامترهای Pn509 و Pn712 کواهد بود که Pn509 و Pn712 خواهد بود که به این مفهوم است که پارامترهای Pn711,Pn712 نسبت به Pn509,Pn510 اولویت دارند

تعاريف جديد	توضيحات
0 : Refer to Pn509 & Pn510	مرجع تعریف ورودی های دیجیتال از پارامترهای Pn509 و Pn510
1 : GEAR 1	ورودي انتخاب ضريب گيربكس 1
2 : GEAR 2	ورودي انتخاب ضريب گيربكس 2
3 : JOGP	ورودی JOG راستگرد
4 : JOGN	ورودی JOG چپگرد
5 : S-P(Switch Mode)	سويیچ بین مد کنترلی Internal Position و مد کنترلی Speed
6 : Position 1	ورودي انتخاب موقعيت 1
7 : Position 2	ورودي انتخاب موقعيت 2
8 : Position 3	ورودي انتخاب موقعيت 3
9 : Position 4	ورودي انتخاب موقعيت 4
F : Disable inputs function	غیر فعال کردن ورودیهای دیجیتال ( برای فرمان گرفتن از شبکه CAN)

### ۲-۱۵) امکان تغییر موقعیت موتور در درایو از طریق MODBUS (RS485)

در سرو درایوهای ورژن استاندارد ، با استفاده از Fn008 می توانستیم موقعیت جاری سرو درایو ( Un009 و Un010 ) را تعیین

کنیم . بدین صورت که مقادیری که در پارامترهای Pn687 و Pn688 تعیین می شدند ، با اجرای Fn008 به عنوان موقعیت جاری سرو موتور در نظر گرفته می شدند و در Un009 و Un010 وارد می شدند . در ورژن جدید ( IR ) برای انجام این فانکشن علاوه براستفاده از Fn008 با استفاده از Keypad درایو،می توان از آدرس مدباس **1070H** نیز استفاده کرد . هر گاه مقدار آدرس 1=1070 شود ، مقادیر تعیین شده در پارامترهای Pn687 و Pn688 به عنوان موقعیت جاری سرو موتور در نظر گرفته می شوند که خصوصا در مدکنترل internal position و حالت کاری absolute بسیار پرکاربرد می باشد.

۳-۱۵) آدرس های مدباس پارامترها در ETS

در ETS آدرس نود تمام AXIS ها در Pn701 انتخاب میشود که برای هرسه محور مشتر ک است. آدرس مد باس پارامترهای محور A دقیقا مانند آدرس پارامترهای درایو Pronet میباشد. برای دسترسی به آدرس های مدباس پارامتر محور B عدد 2000 هگز را به آدرس مدباس پارامتر محور A (بر حسب هگز) اضافه میشود و برای دسترسی به آدرس های مدباس پارامتر محور C عدد 4000 هگز را به آدرس مدباس پارامتر محور A (بر حسب هگز) اضافه میشود. اگر بخواهیم آدرس را بر حسب دسیمال وارد کنیم ابتدا باید آدرس پارامتر مربوطه را به هگز تبدیل کنیم و سپس متناسب با محور مد نظر با عدد 2000 یا 2000 جمع کنیم وسپس نتیجه را به دسیمال تبدیل میکنیم. در نهایت از هر دو آدرس هگز و دسیمال میتوانیم برای آدرس دهی استفاده کنیم.

مثال: میخواهیم مقدار Pn600 را تحت شبکه مدباس در هر سه محور ETS مقدار دهیم. آدرس این پارامتر در محور ets مقدار دهیم. آدرس این پارامتر در محورهای مختلف ETS برابر مقادیر زیر میباشد.

A axis	B axis	C axis	
600	8792	19684	آدرس دسیمال
258	2258	4258	آدرس هگزا دسیمال

همچنین آدرس رجیستر های مربوط به ارتباط مدباس نیز به این روش در ETS قابل دسترسی میباشد. برای مثال آدرس H1023

مربوط به فعال کردن فانکشن JOG از طریق مدباس میباشد و یا آدرس H1070 مربوط به تغییر موقعییت موتور از طریق مدباس میباشد. این آدرس ها مختص محور A هستند که برای دسترسی به آدرس محور B مقدار H2000 و برای دسترسی به آدرس محور C مقدار H4000 را باید با این مقادیر جمع کنیم. برای سایرآدرس ها نیز این چنین عمل میکنیم.

مثال:

A axis	B axis	C axis	
H1023	H3023	H5023	آدرس مربوط به فعال کردن فانکشن JOG
H1070	H3070	H5070	آدرس مربوط به تغییر موقعیت موتور



در سری ETS ارتباط CAN و RS-485 را از طریق CN3 و CN4به صورت جدول زیر می توان بر قرار کرد.

Terminal No.	Name	Function
1	_	Percent
2	_	Reserveu
3	RS-485+	RS-485 communication terminal
4	ISO_GND	lealated around
5	ISO_GND	isolated ground
6	RS-485-	RS-485 communication terminal
7	CANH	CAN communication terminal
8	CANL	CAN communication terminal

4-10)امکان استفادہ از رله های خروجی به عنوان تشخیص میزان Torque

در سرو درایو های ورژن استاندارد امکان فعال کردن یکی از خروجی ها هنگامی که میزان Torque از مقدار مشخصی بالاتر باشد وجود نداشت. ولی در ورژن IR میتوان با تخصیص یکی از خروجی ها به عنوان Torque detection output/ وقتی مقدار Torque موتور از درصد مشخصی که در Pn529 (بر حسب درصد) تعیین میگردد بالاتر یک خروجی فعال میشود و وقتی که مجددا کمتر از در صد مذکور شد خروجی غیر فعال میشود. مقدار زمان تشخیص این حالت در Pn530(بر حسب میلی ثانیه) تعیین میگردد. برای این کار باید در Pn511 بیت مربوط به خروجی مد نظر برابر عدد 9 قرار دهیم. مثال:

میخواهیم اگر مقدار Torque موتور بیشتر از ۲ ثانیه ۵۰ درصد شد خروجی شماره ۵ و۶ فعال شود و وقتی که به کمتر از ۵۰ در صد رسید بعد از ۲ ثانیه خروجی ۵ و۶ غیر فعال شود. برای این کارباید پارامترهای مربوطه به شکل زیر تعریف شوند.

Pn511.2=9 Pn529=50 % Pn230=2000 ms





## A.1 Parameter List

Parameter	Namo	Unit	Setting	Factory	Setting
No.	Name	Onic	Range	Setting	Invalidation
Pn000	Binary Pn000.0: Servo ON Pn000.1: Forward rotation input signal prohibited (P-OT) Pn000.2: Reverse rotation input signal prohibited (N-OT) Pn000.3: Alarm output when instantaneous power loss	_	0~1111	0	After restart
Pn001	Binary Pn001.0: CCW,CW selection Pn001.1: Reserved Pn001.2: Reserved Pn001.3: Electronic gear enabled	_	0~1111	0	After restart
Pn002	Binary Pn002.0: Electronic gear switching mode Pn002.1: Reserved Pn002.2: Reserved Pn002.3: Reserved	_	0~0111	0	After restart
Pn003	Binary Pn003.0: Reserved Pn003.1: Reserved Pn003.2: Low speed compensation Pn003.3: Overload enhancement	_	0~1111	0	After restart
Pn004	Hex Pn004.0:Stop mode Pn004.1: Error counter clear mode Pn004.2:Reference pulse form Pn004.3: Inverses pulse	_	0~0x3425	0×0000	After restart



Parameter	Namo	Unit	Setting	Factory	Setting
No.	Name	Unit	Range	Setting	Invalidation
Pn005	Hex Pn005.0:Torque feedforward mode Pn005.1:Control mode [0] Speed control(parameter reference) [1] Position control(pulse train) [2] Speedcontrol(contactreference) [3]Speed control(contact reference)←→ position control(pulse train) [4] Position control(pulse train)←→ position control(inhibit) [5] Position control (contact reference) [6] Reserved [7] Position control(contact reference) ←→speed control(contact reference) Pn005.2:Out-of-tolerance alarm selection Pn005.3:Servomotor model		0~0x3371	0×0000	After restart
Pn006	Hex Pn006.0:Bus mode Pn006.1:Reserved Pn006.2: Low-frequency vibration suppression switch Pn006.3:Reference input filter for open collector signal	_	0~0x2203	0x0000	After restart
Pn007	Binary Pn007.0: Wider the width of C pulse or not Pn007.1: Reserved Pn007.2: Reserved Pn007.3: Torque filter	_	0~0x1111	0x0000	After restart
Pn100	Online autotuning setting 0:Manual gain adjustment 1,2,3=Normal mode;4,5,6=Vertical load 1,4 = Load inertia without variation; 2,5 = Load inertia with little variation; 3,6=Load inertia with great variation	_	0~6	0	After restart
Pn101	Machine rigidity setting	_	0~15	5	Immediately
Pn102	Speed loop gain	Hz	1~4000	320	Immediately
Pn103	Speed loop integral time constant	0.25ms	1~4096	40	Immediately
Pn104	Position loop gain	Hz	0~1000	40	Immediately
Pn105	Torque reference filter time constant	0.025ms	0~2500	40	Immediately
Pn106	Load inertia percentage	—	0~20000	0	Immediately
Pn107	2nd speed loop gain	Hz	1~4000	320	Immediately
Pn108	2nd speed loop integral time constant	0.25ms	1~4096	40	Immediately
Pn109	2nd position loop gain	Hz	0~1000	40	Immediately

شرکت مهندسی بازرگانی ارکیدگنای ا

Parameter	News	11	Setting	Factory	Setting
No.	Name	Unit	Range	Setting	Invalidation
Pn110	2nd torque reference filter time constant	0.025ms	0~2500	40	Immediately
Pn111	Speed bias	rpm	0~300	0	Immediately
Pn112	Feedforward	%	0~100	0	Immediately
Pn113	Feedforward filter	0.25ms	0~640	0	Immediately
Pn114	Torque feedforward	%	0~100	0	Immediately
Pn115	Torque feedforward filter	0.25ms	0~640	0	Immediately
	P/PI switching condition				
	0:Torque reference percentage				
Dn116	1:Value of offset counter		0.1	0	After restart
Philo	2:Value of acceleration speed setting	_	0~4	U	After restart
	3:Value of speed setting				
	4:Fixed PI				
Pn117	Torque switching threshold	%	0~300	200	Immediately
5.440		reference	0 10000	0	La construction
Pn118	Offset counter switching threshold	pulse	0~10000	0	Immediately
D=110	Setting acceleration speed switching	10	0.2000	0	Immediately
Philip	threshold	Torpm/s	0~3000	0	Immediately
Pn120	Setting speed switching threshold	rpm	0~10000	0	Immediately
	Gain switching condition				
	0:Fix to 1st group gain				
	1:External switch gain switching				
	2:Torque percentage			0	
Pn121	3:Value of offset counter	_	0~7		After start
	4:Value of acceleration speed setting				
	5:Value of speed setting				
	6:Speed reference input				
	7: actual motor speed				
Pn122	Switching delay time	0.25ms	0~20000	0	Immediately
Pn123	Threshold switching level		0~20000	0	Immediately
Pn124	Reserved				
Pn125	Position gain switching time	0.25ms	0~20000	0	Immediately
Pn126	Hysteresis switching	—	0~20000	0	Immediately
Pn127	Low speed detection filter	025ms	0~100	10	Immediately
Pn128	Speed gain acceleration relationship	_	0~3	3	Immediately
	during online autotuning		5		
Pn129	Low speed correction coefficient	_	0~30000	0	Immediately
Pn130	Friction load	0.1%	0~3000	0	Immediately
Pn131	Friction compensation speed hysteresis	rom	0~100	0	Immediately
	area	1911	0 100		
Pn132	Sticking friction load	0.1%/1000rp	0~1000	0	Immediately
		m	0-1000		
Pn200	PG divided ratio	Puls	1~2500	2500	After restart
Pn201	1st electronic gear numerator	—	1~65535	1	After restart

شرکت مهندسی بازرگانی ارکیل دنام ۱۳۳۸ می

Parameter	leter Namo	11	Setting	Factory	Setting
No.	Name	Unit	Range	Setting	Invalidation
Pn202	Electronic gear denominator	_	1~65535	1	After restart
Pn203	2nd electronic gear numerator	_	1~65535	1	After restart
D=204	Position reference Acceleration	0.05mg	0.00707	0	luone edictolui
P1/204	/deceleration time constant	0.25ms	0~32767	0	Immediately
Pn205	Position reference filter form selection	_	0~1	0	After restart
Pn206	Pluse input port and synchronization mode		0~0×0133	0	After restart
111200	selection		0.000100	0	Anter restart
Pn207	3th electronic gear numerator	_	1~65535	1	After restart
Pn208	4th electronic gear numerator	—	1~65535	1	After restart
Pn304	Parameter speed	rpm	-6000~6000	500	Immediately
Pn305	JOG speed	rpm	0~6000	500	Immediately
Pn306	Soft start acceleration time	ms	0~10000	0	Immediately
Pn307	Soft start deceleration time	ms	0~10000	0	Immediately
Pn308	Speed filter time constant	ms	0~10000	0	Immediately
Pn309	S curve risetime	ms	0~10000	0	Immediately
Pn310	Speed reference curve form 0:Slope 1:S curve 2:1 <sup>st</sup> order filter 3:2 <sup>nd</sup> order filter	_	0~3	0	After restart
Pn311	S form selection		0~3	0	Immediately
Pn316	Internal speed 1	rpm	-6000~6000	100	Immediately
Pn317	Internal speed 2	rpm	-6000~6000	200	Immediately
Pn318	Internal speed 3	rpm	-6000~6000	300	Immediately
Pn319	Internal speed 4	rpm	-6000~6000	-100	Immediately
Pn320	Internal speed 5	rpm	-6000~6000	-200	Immediately
Pn321	Internal speed 6	rpm	-6000~6000	-300	Immediately
Pn322	Internal speed 7	rpm	-6000~6000	500	Immediately
Pn401	Forward torque internal limit	%	0~300	300	Immediately
Pn402	Reverse torque internal limit	%	0~300	300	Immediately
Pn403	Forward external torque limit	%	0~300	100	Immediately
Pn404	Reverse external torque limit	%	0~300	100	Immediately
Pn405	Plug braking torque limit	%	0~300	300	Immediately
Pn406	Speed limit during torque control	rpm	0~6000	1500	Immediately
Pn407	Notch filter 1 frequency	Hz	50~2000	2000	Immediately
Pn408	Notch filter 1 depth	—	0~11	1	Immediately
Pn409	Notch filter 2 frequency	Hz	50~2000	2000	Immediately
Pn410	Notch filter 2 depth	_	0~11	1	Immediately
Pn411	Low frequency jitter frequency	0.1Hz	50~500	100	Immediately
Pn412	Low frequency jitter damp		0~200	25	Immediately
Pn413	Torque control delay time	0.25ms	1~2000	100	Immediately
Pn414	Torque control speed hysteresis	rpm	10~1000	50	Immediately
Pn500	Positioning error	Puls	0~5000	10	Immediately

				0	مهندسی بازرگانی ارکید کمام
Parameter	Namo	Unit	Setting	Factory	Setting
No.	Name	Onit	Range	Setting	Invalidation
Pn501	Coincidence difference	rpm	0~100	10	Immediately
Pn502	Reserved	—	_	_	<u> </u>
Pn503	Rotation detection speed TGON	rpm	0~3000	20	Immediately
Pn504	Offset counter overflow alarm	256Puls	1~32767	1024	Immediately
Pn505	Servo ON waiting time	ms	-2000~2000	0	Immediately
Pn506	Basic waiting flow	10ms	0~500	0	Immediately
Pn507	Brake waiting speed	rpm	10~100	100	Immediately
Pn508	Brake waiting time	10ms	10~100	50	Immediately
Pn509	Allocate input signal to terminal	_	0~0xEEEE	0x3210	After restart
Pn510	Allocate input signal to terminal		0~0xEEEE	0x7654	After restart
Pn511	Allocate output signal to terminal	_	0~0x0999	0x0210	After restart
Pn512	Bus control input node low-bit enable	_	0~1111	0	Immediately
Pn513	Bus control input node low-bit enable	_	0~1111	0	Immediately
Pn514	Input port filter	0.2ms	0~1000	1	Immediately
Pn515	Alarm port filter	0.2ms	0~3	1	Immediately
Pn516	Input port signal inversion		0~1111	0	Immediately
Pn517	Input port signal inversion	_	0~1111	0	Immediately
Pn518	Dynamic brake time	0.5ms	50~2000	125	Immediately
Pn519	Reserved	_	_	_	_
Pn520	Position complete time	0.25ms	0~60000	500	Immediately
Pn521	Reserved			_	_
Pn522	Reserved	_	_	_	_
Pn523	Reserved	_	_	_	_
Pn524	Reserved	_	_		_
Pn525	Overload alarm threshold	%	100~150	100	Immediately
Pn526	Reserved		_		_
Pn527	Reserved	_	_	_	
Pn528	Output signal inverse	_	0~1111	0	Immediately
1 11020	Torque detection output signal threshold				
Pn529	value	%	3~300	100	Immediately
Pn530	Torque detection output signal time	ms	1~1000	10	After restart
Pn600	Position pulse in point to point control	10000P	-9999~9999	0	Immediately
Pn601	Position pulse in point to point control	1P	-9999~9999	0	Immediately
Pn630	Position pulse in point to point control	1P	-9999~9999	0	Immediately
Pn631	Position pulse in point to point control	1P	-9999~9999	0	Immediately
Pn632	Point to point speed control	rnm	0~3000	500	Immediately
1 11002		ipiii	0.0000		ininecialely
Dn647	Point to point speed control	rom	0~3000	500	Immediately
Dn649	Point to point speed control	0.25mg	0~3000		Immediately
F11040		0.20MS	0~32707	0	minieulately
Decco	Doint to point1ct order filter	0.05	0, 20707		Immediatelu
Pn663		0.25ms	0~32/6/		Immediately
Pn664	Stop time	50ms	0~300	10	Immediately

شرکت مهندسی بازرگانی ۱, کول کیل

Parameter	Namo	Unit	Setting	Factory	Setting
No.	).		Range	Setting	Invalidation
Pn679	Stop time	50ms	0~300	10	Immediately
Pn680	Reserved		_	5 <b>—</b> 5	<del></del>
Pn681	Hex Pn681.0:Single/cyclic, start/reference point selection Pn681.1:Change step and start mode Pn681.2:Change step input signal mode Pn681.3: Step change mode	—	0x1133	0x0000	Immediately
Pn682	Programme mode	_	0~1	0	Immediately
Pn683	Programme start step	. —	0~15	0	Immediately
Pn684	Programme stop step		0~15	1	Immediately
Pn685	Search travel speed in position control (contact reference); Speed of finding reference point (hitting the origin signal ORG) in position homing control.	rpm	0~3000	1500	Immediately
Pn686	Leave travel switch speed in position control(contact reference); Speed of finding reference point (leaving the origin signal ORG) in position homing control.	rpm	0~200	30	Immediately
Pn687	Position teaching pulse	10000P	-9999~9999	0	Immediately
Pn688	Position teaching pulse	1P	-9999~9999	0	Immediately
Pn689	Homing Mode Setting		0~0111	0	After restart
Pn690	Number of offset pulses during homing	10000P	0~9999	0	Immediately
Pn691	Number of offset pulses during homing	1P	0~9999	0	Immediately
Pn695	Running speed of offset pulses	rpm	0~3000	30	Immediately
Pn700	Hex Pn700.0:MODBUS communication baud rate Pn700.1:MODBUS protocol selection Pn700.2:Communication protocol selection Pn700.3:Reserved		0~0x0085	0x0151	After restart
Pn701	MODBUS axis address		1~247	1	After restart
Pn702	Reserved		_	5	—
Pn703	CAN communication speed	0	0x0015	0x0004	After restart
Pn704	CAN communication contact		1~127	1	After restart
Pn711	Input signal allocation		0~0xFFFF	0	After restart
Pn712	Input signal allocation		0~0xFFFF	0	After restart
Pn840	Hex Pn840.0: Encoder model selection Pn840.1: Reserved		0x0006~ 0x0F16	_	After restart



Parameter No.	Name	Unit	Setting Range	Factory Setting	Setting Invalidation
	Pn840.2: Power level of Machine				
	Pn840.3: Reserved				

# A.2 Description of Parameter Type

Туре	Parameter No.	Description
Funtion selection switches	Pn000~Pn007	Control mode, stop mode, and some functions selection
Parameters of servo gain	Pn102~Pn134	Position gain, speed gain, rigidity, etc.
Position control related parameters	Pn200~Pn206	PG divided ratio, electronic gear, etc.
Speed control related parameters	Pn304~Pn322	Speed reference input, soft start, etc.
Torque control related parameters	Pn401~Pn410	Torque limit, etc.
Parameters to control I/O port	Pn500~Pn528	Allocation of I/O port function
Point-to-point control and homing control	Pn600~Pn688	Internal point-to-point control and homing control related
related parameters		parameters
Communication parameters	Pn700~Pn704	Setting of communication parameters



## A.3 Parameters in detail

Parameter	rameter Set	Setting	Control	Function and Meaning	
No.	Description	Validation	Mode		
				Pn000.0 Servo ON	
				[0] External S-ON enabled.	
				[1]External S-ON disabled. Servomotor excitation	
				signal is turned ON automatically after S-RDY is	
				output.	
				Pn000.1 Forward rotation input signal prohibited	
				( <b>P-OT</b> )	
				[0]External P-OT enabled. Operate in the time	
				sequence setting in Pn004.0 when travel limit occurs.	
				[1] External P-OT disabled.	
Pn000	Binary	After restart	ALL	Pn000.2 Reverse rotation input signal prohibited	
				(N-OT)	
				[0]External N-OT enabled. Operate in the time	
				sequence setting in Pn004.0 when travel limit occurs.	
				[1] External N-OT disabled.	
				Pn000.3 Alarm output when instantaneous power	
				loss	
				[0]Instantaneous power loss for one period with no	
				alarm output	
				[1]Instantaneous power loss for one period withalarm	
				output	
	Binary	After restart	Pn001.0	Pn001.0CCW,CW selection	
			ALL	[0] Sets CCW as forward direction	
			Pn001.1	[1] Sets CW as forward direction	
Pn001			Т	Pn001.1 Reserved	
111001			Pn001.2	Pn001.2 Reserved	
			P, S	Pn001.3 Electronic gear enabled	
			Pn001.3	[0] Disable electronic gear switching function	
			Р	[1]Enable electronic gear switching function	
				Pn002.0Electronic gear switching mode	
Pn002				[0]Corresponding time sequence	
	Binary	After restart	ALL	Pn203 Pn201 Electronic gear numerator 2 Pn201 Electronic gear numerator 1 PCON enabled Electronic gear numerator 1 PCON disabled PCON disabled Reference pulse t1 PCON disabled t2 Reference pulse t1 PCON disabled t2 PCON	
				t1, t2>1ms	
				[1] Corresponding time sequence	



Parameter	Description	Setting Validation	Control	Function and Meaning
		Vanualion	MOUL	Pn203 Pn201 Electronic gear numerator 2 Pn201 Electronic gear numerator 1 PCON enabled Electronic gear numerator 1 PCON disabled Reference pulse 1 1, t2>lms
				Time sequence when Pn002.0=0 or 1 Pn203 Pn201 Electronic gear numerator 2 Pn201 Electronic gear numerator 1 PCON enabled Electronic gear numerator 1
				PCON disabled Reference pulse t1, t2, t3, t4>lms
				Error time sequence
				Pn203 Pn201 Electronic gear numerator 2 Pn201 Electronic gear numerator 1 PCON enabled Electronic gear numerator 1 PCON disabled PCON disabled Reference pulse t1
				t1, t2>1ms
				Pn002.1Reserved
				Pn002.2 Reserved Pn002.3 Reserved
				Pn003.0 Reserved
				Pn003.1Reserved
	Binary	After restart	ALL	Pn003.2 Low speed compensation
				[0] Without low speed correction
				[1]With low speed correction to avoid servomotor
				creeping, but the degree of correction is
Pn003				determined by the setting in Pn219.
				Pn003.3 Overload enhancement
				[0] Without overload enhancement function
				[1]With overload enhancement function, which can
				enhance the overload capacity when servomotor
				frequent nower ON/OFE accessions
				Pn004 0 Ston Mode
			Pn004.0	[0]Stops the servomotor by applying DB and then
			ALL	releases DB.
Pn004	Hex	After restart	Pn004.1	[1]Coast to a stop.
			P	[2]Stops the servomotor by DB when servo OFF, stops
			P11004.2	the servomotor by plug braking when overtravel, then
			P Pn004.3 P	places it into coast (power OFF) mode.
				[3]Makes the servomotor coast to a stop state when
				servo OFF, stops the servomotor by plug braking when



Parameter	Description	Setting	Control	Function and Meaning
No.	Description	Validation	Mode	Function and Meaning
				overtravel, then places it into coast (power OFF) mode.
				[4]Stops the servomotor by DB when servo OFF, stops
				the servomotor by plug braking when overtravel, then
				places it into zero clamp mode.
				[5]Makes the servomotor coast to a stop state when
				servo OFF, stops the servomotor by plug braking when
				overtravel, then places it into zero clamp mode.
				Pn004.1 Error counter clear mode
				[0]Clearerror pulse when S-OFF, donot when
				overtravel.
				[1]Do not clear error pulse.
				[2]Clearerror pulse when S-OFF orovertravel
				(excep for zero clamp)
				Pn004.2 Reference pulse form
				[0]Sign + Pulse
				[1]CW+CCW CW + CCW
				[2]A + B (×1)
				[3]A + B (×2)
				[4]A + B (×4)
				Pn004.3 Inverses pulse
				[0]Do not inverse PULS reference and SIGN reference.
				[1]Do not inverse PULS reference; Inverses SIGN
				reference.
				[2]Inverse PULS reference;Do not inverse SIGN
				reference.
				[3]Inverse PULS reference and SIGN reference.
				Pn005.0 Torque feedforward form
				[0]Usegeneral torque feedforward
				[1] Usehigh-speed torque feedforward
		After restart		Pn005.1 Control mode
				[0]Speed control(Parameter reference)
				PCON is invalid.
			Pn005.0	[1]Position control(pulse train reference)
			P, S	PCON: OFF, PI control; ON, P control
			Pn005.1	[2]Speed control(contact reference)←→speed
Pn005	Hex		ALL	Control(zero reference)
			Pn005.2	PCON, PCL, NCL: OFF Switches to position
			Р	control(zero reference)
				[3]Speed control(contact reference) $\leftarrow \rightarrow$ position
				control(pulse train reference)
				PCON, PCL, NCL: OFF Switches to position
				control(pulse train reference)
				[4]Positin control(pulse train reference)←→position
				control(INHIBIT)



Parameter	Description	Setting	Control	Eurotion and Magning
No.	Description	Validation	Mode	Function and meaning
				PCON: OFF Position control(pulse train
				reference); ON position control(INHIBIT)
				[5]Position control(contact reference)
				PCON: Used to change step
				PCL, NCL: Used to search reference point or start
				[6] Reserved
				[7] Position control(contact reference) ←→speed
				control(contact reference)
				Pn005.2 Out-of-tolerance alarm selection
				[0]Out-of-tolerance alarm disabled
				[1]Out-of-tolerance alarm enabled. Outputs alarm
				when the value of error counter exceeds Pn504
				setting value.
				[2] Reserved
				[3] Reserved
				Pn005.3 Servomotor model selection①
				[0]EMJ
				[1]EMG
				[2] EML
		After restart		Pn006.0 Bus type selection <sup>©</sup>
				[0] No bus
				[1] Reserved
				[2] Reserved
				[3] CANopen
				Pn006.1 Reserved
				Pn006.2 Low-frequency vibration suppression
				switch
	Hex			[0] Low-frequency vibration suppression function
				disabled
D=000				[1] Speed low-frequency vibration suppression function
Phuub				enabled
				[2] Position low-frequency vibration suppression
				function enabled
				Pn006.3 Reference input filter for open collector
				signal
				[0] When pulse is difference input, the max value of
				servo receiving pulse frequency⊘≤4M
				[1] When pulse is difference input, the max value of
				servo receiving pulse frequency⊘≤650K
				[2] When pulse is difference input, the max value of
				servo receiving pulse frequency⊘≤150K
				Pn007.0: Wider the width of C pulse or not
Pn007	Binary	After restart		[0] Standard width of C pulse
				[1] Wider the width of C pulse



Parameter	Description	Setting	Control	Function and Meaning
No.		Validation	Mode	
				Pn007.1: Reserved Pn007.2: Reserved
				Pn007.3: Torque filter
				[0] Standard torgue filter
				[1] New torque filter
				[0] Manual gain adjustment
				[1,2,3] Normal mode
				[4,5,6] Vertical load
				[1,4] Load inertia without variation
				[2,5] Load inertia with little variation
				[3,6] Load inertia with great variation
				Note:
				1.Autotuning is invalid when servomotor max.speed is
	Online autotuning			less than 100rpm.Manual gain adjustment is used.
Pn100	setting	After restart	P, S	2.Autotuning is invalid when servomotor acceleration
				/deceleration speed is less than 5000rpm/s. Manual
				gain adjustment is used.
				3.Autotuning is invalid when mechanical clearance is
				too big during operation. Manual gain adjustment is
				used.
				4.Autotuning is invalid when the difference of different
				speed load is too great. Manual gain adjustment is
				used.
				The response speed of servo system is determined by
				this parameter. Normally, the rigidity should be set a
Pn101	Machine rigidity	Immediately	P. S	little larger. However, if it is too large, it would suffer
	setting		.,	mechanical impact. It should be set a little smaller when
				large vibration is present. This parameter is only valid in
				autotuning.
Pn102	Speed loop gain	Immediately	P, S	This parameter determines speed loop gain.
				Unit: Hz
	Speed loop integral			Decreases the value of this parameter to shorten
Pn103	time constant	Immediately	P, S	positioning time and enhance speed response.
				Unit: 0.25ms
				This parameter determines position loop gain.
Pn104	Position loop gain	Immediately	Р	Decreases this value to enhance servo rigidity, but
				vibration will occur if the value is too large.
				Unit. I/S
Dp105	Torque reference	Immodiately	Pe	mechanical vibration but incorrect acting will recult to
F1105	filter time constant	minediately	F, 3	mechanical vibration, but incorrect setting will result to
	Load inertia			Setting value=(lead inartia/reter inartia) × 100
Pn106		Immediately	P, S	
Pn107	2nd sneed loop gain	Immediately	РQ	The meanings of these parameters are the same as
FILLO	znu speeu loop galli	inneulatery	F, 0	The meanings of mese parameters are the same as


Parameter	Description	Setting	Control	Function and Meaning
No.	Decomption	Validation	Mode	i unotion una mouning
Pn108	2nd speed loop integral time constant	Immediately	P, S	Pn102~Pn105. These parameters are only needed to set when two
Pn109	2nd position loop gain	Immediately	Ρ	types of gain function are enabled.
Pn110	2nd torque reference filter time constant	Immediately	P, S	
Pn111	Speed bias	Immediately	Ρ	This parameter setting can shorten positioning time. However, if it is too large or does not cooperate with Pn111 correctly, vibration will occur. The relationship with speed reference, error counter, positioning error is shown in the following chart.
Pn112	Feedforward	Immediately	Ρ	It is used to set position feedforward. The response speed is faster and position error is less when this parameter setting is higher. Vibration will occur if the value is set too large. Unit: %
Pn113	Feedforward filter	Immediately	Ρ	It is used to ease mechanical vibration due to position feedforward. The feedforward lag will be enlarged and result to vibration if the value is set too large. Unit: 0.25ms
Pn114	Torque feedforward	Immediately	P, S	It is used to set torque feedforward, and enhance response speed. Set the load inertia percentage(Pn106) correctly to enable this function in manual gain adjustment mode. Unit: %
Pn115	Torque feedforward filter	Immediately	P, S	It is used to ease mechanical vibration due to torque feedforward. Unit: 0.25ms
Pn116	P/PI switching condition	After restart	P, S	0:Torque reference percentage 1:Value of offset counter 2:Value of acceleration speed setting 3:Value of speed setting 4:Fixed PI



Parameter No.	Description	Setting Validation	Control Mode	Function and Meaning
Pn117	Torque switching	After restart	P, S	Threshold of torque to switch PI control to P control.
Pn118	Offset counter switching threshold	Immediately	Р	Threshold of error counter to switch PI control to P control. Unit: pulse
Pn119	Setting acceleration speed switching threshold	Immediately	P, S	Threshold of acceleration speed to switch PI control to P control. Unit: 10rpm/s
Pn120	Setting speed switching threshold	Immediately	P, S	Threshold of speed to switch PI control to P control. Unit: rpm
Pn121	Gain switching condition	After restart	P, S	0:Fix to 1st group gain 1:External switch gain switching(G-SEL) 2:Torque percentage 3:Value of offset counter 4:Value of acceleration speed setting (10rpm) 5:Value of speed setting 6:Speed reference input 7: actual motor speed
Pn122	Switching delay time	Immediately	P, S	Delay time of switching gain when switching condition is satisfied.
Pn123	Switch threshold level	Immediately	P, S	Gain switching trigger level
Pn125	Position gain switching time	Immediately	Р	This parameter is used to smooth transition if the change of the two groups of gain is too large.
Pn126	Hysteresis switching	Immediately	P, S	This parameter is used to set the operation hysteresis of gain switching.
Pn127	Low speed detection filter	Immediately	P, S	This parameter is used to filter in low speed detection. The speed detection will be lagged if the value is too large.
Pn128	Speed gain acceleration relationship during online autotuning	Immediately	P, S	The increasing multiple of speed loop gain is the same rigidity during online autotuning. The speed loop gain is larger when this value is higher.
Pn129	Low speed correction coefficient	Immediately	P, S	The intensity of anti-friction and anti-creeping at low speed. Vibration will occur if this value is set too large.
Pn130	Friction Load	Immediately	P, S	Frictin load or fixed load compensation
Pn131	Friction compensation speed hysteresis area	Immediately	P, S	Threshold of friction compensation start
Pn132	Sticking friction load	Immediately	P, S	Sticking damp which is in direct proportion to speed.
Pn200	PG divided ratio	After restart	P, S	Analog encoder output orthogonal difference pulses. The meaning of this value is the number of analog encoder output orthogonal difference pulses per one servomotor rotation.



Parameter	Description	Setting Validation	Control	Function and Meaning
NO.	det electronic seen	valuation	wode	The electronic near analytics the reference mules to
Pn201	numerator	After restart	Р	relate with the servomotor travel distance, so the host
Pn202	Electronic gear denominator	After restart	Р	controller doesn't change the mechanical deceleration ratio and encoder pulses. In fact, it is the setting of
Pn203	2nd electronic gear numerator	After restart	Ρ	frequency doubling or frequency division to the reference pulses. $\frac{Numerator(Pn201 \text{ or } Pn203)}{Deno\min ator(Pn202)}$
Pn204	Position reference acceleration /deceleration time constant	Immediately	Ρ	This value is used to smooth the input pulses. The effect of smoothness is better when the value is higher, but lag will occur if the value is too large.
Pn205	Position reference filter form selection	After restart	Р	[0] 1st order filter [1] 2nd order filter
Pn206	Pluse input selection	After restart	Ρ	<ul> <li>Pn206.0 Pluse input port selection <ul> <li>[0] use pluse input themselves</li> <li>[1] use A-axis pluse input port</li> <li>[2] use B-axis pluse input port</li> <li>[3] use C-axis pluse input port</li> </ul> </li> <li>Pn206.1 Synchronize selection <ul> <li>[0] A-axis and B-axis use the same pluse input port setted by Pn206.0, C-axis use C-axis pluse input port</li> <li>[1] A-axis and C-axis use the same pluse input port setted by Pn206.0, B-axis use B-axis pluse input port setted by Pn206.0, A-axis use A-axis pluse input port</li> </ul> </li> <li>[2] B-axis and C-axis use the same pluse input port setted by Pn206.0, A-axis use A-axis pluse input port setted by Pn206.0, A-axis use A-axis pluse input port setted by Pn206.0, A-axis use the same pluse input port setted by Pn206.0, A-axis use the same pluse input port setted by Pn206.0, A-axis use the same pluse input port setted by Pn206.0, A-axis use the same pluse input port setted by Pn206.0, A-axis use the same pluse input port setted by Pn206.0, A-axis use the same pluse input port setted by Pn206.0, A-axis use the same pluse input port and port</li> </ul>
Pn207	3st electronic gear numerator	After restart	Р	The electronic gear enables the reference pulse to relate with the servomotor travel distance, so the host
Pn208	4st electronic gear numerator	After restart	Р	controller doesn't change the mechanical deceleration ratio and encoder pulses. In fact, it is the setting of frequency doubling or frequency division to the reference pulses.
Pn304	Parameter speed	Immediately	S	The parameter can be set to positive or negative. When control mode is set to D, it determines the speed of motor . The servomotor speed is determined by this parameter



Parameter No.	Description	Setting Validation	Control Mode		Fun	ction and	d Meaning	
				when Pn0	05.1=D.			
Pn305	IOG speed	Immediately	9	It is used	o set JOG	rotation	speed, and the direction	on is
	JOO speed	inineciately		determine	d by the p	ressing ke	ey during JOG operati	on.
Pn306	Soft start	Immediately	s	The time for	trapeziform	acceleratio	on to accelerate to 1000rp	m.
	acceleration time	initioalatory		Unit: ms				
	Soft start		5005	The time	for trapez	iform dec	celeration to deceleration	te to
Pn307	deceleration time	Immediately	S	1000rpm.				
				Unit: ms				
Pn308	Speed filter time	Immediately	s	1st order 1	ilter time c	onstant		
	Constant			The time f	or transitio	n from or	a point to another poi	int in
Pn309	risetime	Immediately	S	S curve			ne point to another po	
	liseume			0:Slope				
	Speed reference			1:S curve				
Pn310	curve form	After restart	S	2:1 <sup>st</sup> order	filter			
				3:2 <sup>nd</sup> order filter				
Pn311	S formselection	After restart	S	This value	determine	es the trai	nsition form of S curve	<b>)</b> .
Pn316	Speed internal 1	Immediately	S	Internal sp	eed is ena	abled whe	en Pn005.1=3~6	
Pn317	Speed internal 2	Immediately	S	l Ir	put signa	d	operating speed	]
Pn318	Speed internal 3	Immediately	S					
Pn319	Speed internal 4	Immediately	S		/F-CL			-
Pn320	Speed internal 5	Immediately	S	OFF(H)	OFF(H)	OFF(H)	Zero speed or switch	
Pn321	Speed internal 6	Immediately	S				to other control modes	
					OFF(H)	ON(L)	SPEED1	
					ON(L)	OFF(H)	SPEED2	
					ON(L)	ON(L)	SPEED3	
Pn322	Speed internal 7	Immediately	S	ON(L)	OFF(H)	OFF(H)	SPEED4	]
					OFF(H)	ON(L)	SPEED5	]
					ON(L)	OFF(H)	SPEED6	]
					ON(L)	ON(L)	SPEED7	
Pn401	Forward torque	Immediately	PS				•	
111401	internal limit	inineciatery	1,0					
Pn402	Reverse torque	Immediately	P, S					
	internal limit			-				
Pn403	Forward external	Immediately	P, S	Servomote	or output to	orque limi	t value (depending or	n the
				actual ove	rload capa	acity).		
Pn404	torque limit	Immediately	P, S					
D. 405	Plug braking torque	lana and all at the		1				
Pn405	limit	Immediately	P, S					
Pn406	Speed limit during	Immediately	т	Servomote	or output	torque l	limit value during to	rque
1-11400	torque control	mineulately	'	control				



Parameter No.	Description	Setting Validation	Control Mode	Function and Meaning	
Pn407	Notch filter 1 frequency	Immediately	P, S	Notch filter 1 frequency	1. In some conditions, vibration will be picked
Pn408	Notch filter 1 depth	Immediately	P, S	Notch filter 1 depth	up and response will be
Pn409	Notch filter 2 frequency	Immediately	P, S	Notch filter 2 frequency	lagged after notch filter is set.
Pn410	Notch filter 2 depth	Immediately	P, S	Notch filter 2 depth	<ol> <li>When notch filter frequency is set to 5000, the notch filter is invalid.</li> </ol>
Pn411	Low frequency vibration frequency	Immediately	P, S	Frequency of low frequency v	ibration with load.
Pn412	Low frequency vibration damp	Immediately	P, S	Attenuation damp of low freque does not need to change.	ency vibration with load. It
Pn413	Torque control delay time	Immediately	т	These parameters are only e	enabled in position control
Pn414	Torque control speed hysteresis	Immediately	т	mode.	
Pn500	Positioning error	Immediately	Р	Outputs /COIN signal when this value.	error counter is less than
Pn501	Coincidence difference	Immediately	Ρ	Outputs /VCMP signal when speed reference value and sp than this value.	n the difference between eed feedback value is less
Pn502	Zero clamp speed	Immediately	S	The servomotor is locked i position loop when the spe analog input is less than this	n the form of temporary eed corresponding to the value.
Pn503	Rotation detection speed TGON	Immediately	P, S	When the servomotor speed setting value, it means that the rotated steadily and outputs /	d exceeds this parameter ne servomotor has already TGON signal.
Pn504	Offset counter overflow alarm	Immediately	Ρ	When the value in error count setting value, it means that occurred and outputs alarm a	ter exceeds this parameter error counter alarm has n signal.
Pn505	Servo ON waiting time	Immediately	P, S	These parameters are only output parameters are allocat These parameters are used from gravity glissade or cor	enabled when the port ed with /BK signal output. to keep braking (prevent ntinuous outside force on
Pn506	Basic waiting flow	Immediately	P, S	servomotor) time sequence. Servo ON waiting time: ①For the parameter is plus, when servo-ON signal is in excitation signal is created af	/BK signal is output firstly put, and then servomotor ter delaying the parameter
Pn507	Brake waiting speed	Immediately	P, S	setting time. ØFor the parameter is min signal is output firstly when and then /BK signal is cr	us, servomotor excitation servo-ON signal is input, eated after delaying the



Parameter	Description	Setting	Control	Function and Meaning
No.	Description	Validation	Mode	r unetter and meaning
No. Pn508	Brake waiting time	Immediately	P, S	parameter setting time. <b>Basic waiting flow:</b> Standard setting: /BK output (braking action) and servo-OFF are at the same time. Now, the machine movable part may shift slightly due to gravity according to mechanical configuration and character; it can be eliminated by using the parameters when the servomotor is at stop or at a low speed. <b>Brake waiting speed:</b> /BK signal is output when the servomotor speed is decreased below the parameter setting value at servo-OFF. <b>Brake waiting time:</b> BK signal is output when the delay time exceeds the parameter setting value after servo-OFF.
Pn509	Allocate input port to signal, one port with four bits(hex)	After restart	P, S	<ul> <li>/BK signal is output as long as either of the brake waiting speed or brake waiting time is satisfied.</li> <li>Pn509.0 corresponding port CN1_A/B/C_10</li> <li>Pn509.1 corresponding port CN1_A/B/C_11</li> <li>Pn509.2 corresponding port CN1_A/B/C_12</li> <li>Pn509.3 corresponding port CN1_A/B/C_13</li> </ul>
Pn510	Allocate input port to signal, one port with four bits(hex)	After restart	P, S	Philoto corresponding port CN1_A/B/C_14 Pn510.1 corresponding port CN1_A/B/C_15 Pn510.2 corresponding port CN1_A/B/C_16 Pn510.3 corresponding port CN1_A/B/C_17 Corresponding signal of each data is shown as following: 0: S-ON 1: P-CON 2: P-OT 3: N-OT 4: ALMRST 5: CLR 6: P-CL 7: N-CL 8: G-SEL 9: JDPOS-JOG+ A: JDPOS-JOG- B: JDPOS-HALT C: HmRef D: SHOM E: ORG
Pn511	Output signal allocation	After restart	P, S	Pn511.0 corresponding port CN1_A/B/C_7, CN1_A/B/C_8



Parameter	Description	Setting	Control	Function and Magning
No.	Description	Validation	Mode	Function and Meaning
				Pn511.1 corresponding port CN1_A/B/C_1,
				CN1_A/B/C_2
				Pn511.2 corresponding port CN1_A/B/C_5,
				CN1_A/B/C_6
				Corresponding signal of each data is shown as follows:
				0: /COIN/VCMP
				1: /TGON
				2: /S-RDY
				3: /CLT
				4: /BK
				5: /PGC
				6: OT
				7: /RD
				8: /HOME
				9: /TCR
				Bus communication input port enabled:
				[0]: Disabled
Pn512	Bus control input	Immediately	P, S	[1]. Enabled
FIIJIZ	node low-bit enabled	mmediatery		$Pn512 0 \rightarrow CN1 A/B/C 10$
				$Pn512.1 \rightarrow CN1 A/B/C 11$
				$Pn512 2 \rightarrow CN1  A/B/C  12$
				$P_{n}512.2 \rightarrow CN1_{A}/B/C_{13}$
	Bus control input node low-bit enabled	Immediately	P, S	$P_{0} = 513 \ O_{1} O_$
Pn513				$P_{15} = 13 + 2001 + 0.000 = 14$
				$P_{15} = C N_{A} + C N_{$
				$PII513.2 \rightarrow CN1_A/B/C_10$
				PIISIS.3-9 CINT_AVB/C_17
Pn514	Input port filter	Immediately	P, S	It is used to set input port litter time. The signal will be
				lagged if the parameter setting is too high.
Pn515	Alarm port filter	Immediately	P, S	It is used to set alarm inter time. The signal will be
	Input port signal			[0]: Do not inverse signal.
Pp516	inversion	Immediately	DS	[1]: Inverse signal
		minediatery	r, 0	Ph516.0 $\rightarrow$ CN1_A/B/C_10 Inversion
				Pn516.1 $\rightarrow$ CN1_A/B/C_11 inversion
				Pn516.2→CN1_A/B/C_12 inversion
	In suit south size of			Pn516.3→CN1_A/B/C_13 inversion
Pn517	input port signal	lana a Rataka		$Pn517.0 \rightarrow CN1_A/B/C_14$ inversion
	Inversion	Immediately	Ρ, 5	$Pn517.1 \rightarrow CN1_A/B/C_{15}$ inversion
				$Pn517.2 \rightarrow CN1_A/B/C_16$ inversion
				Pn517.3→CN1_A/B/C_17 inversion
Pn518	Dynamic brake time	Immediately	P, S	Dynamic brake time
Pn519	Reserved	—	—	—
Pn520	Position complete	Immediately	PS	Position complete time
111520	time	mineulately	F,3	



Parameter	Description	Setting	ng Control tion Mode	Eunction and Meaning
No.	Description	Validation		Function and meaning
Pn521	Reserved	_	_	_
Pn522	Reserved	_		—
Pn523	Reserved	_	_	—
Pn524	Reserved			_
Pn525	Overload alarm threshold	Immediately	P, S	When load percentage is larger than overload alarm threshold, A04 will occur soon. Pn525 is recommended to set below 120, otherwise the servo drive and motor will be damaged.
Pn526	Reserved	—	_	_
Pn527	Reserved		_	_
Pn528	Output signal inverse	_	_	<ul> <li>[0]: Do not inverse signal.</li> <li>[1]: Inverse signal</li> <li>Pn528.0→CN1_A/B/C_3,4 inversion</li> <li>Pn528.1→CN1_A/B/C_7,8 inversion</li> <li>Pn528.2→CN1_A/B/C_1,2inversion</li> <li>Pn528.3→CN1_A/B/C_5,6 inversion</li> </ul>
Pn529	Torque detection output signal threshold value	Immediately	P, S, T	When motor torque output is higher than Pn529 setting value,/TCR is ON. When motor torque output is lower than Pn529 setting value,/TCR is OFF. Unit:%
Pn530	Torque detection output signal time	After restart	P, S, T	Torque detection output signal time. Unit:ms
Pn600	JPOS0 Position pulse in point to point control	Immediately	Ρ	The two parameters are used in combination, and the algebraic sum of them is the position JPOS0 needs to reach.(Thenumber of servomotor rotation revolutions is
Pn601	JPOS0 Position pulse in point to point control	Immediately	Р	related with the programme mode of point to point control.) Pn600 Unit: 10000P Pn601 Unit: 1P
				The meaning of other point to point control related parameters are the same.
Pn630	JPOS15 Position pulse in point to point control	Immediately	Р	The two parameters are used in combination, and the algebraic sum of them is the position of JPOS0 needs to reach.(The number of servomotor rotation revolutions is
Pn631	JPOS15 Position pulse in point to point control	Immediately	Р	related with the programme mode of point to point control.)
Pn632	JPOS0 Point to point speed control	Immediately	Р	JPOS0 Point to point speed control Unit: rpm
				The speed of other point to point control
Pn647	JPOS15 Point to point speed control	Immediately	Р	The speed of JPOS15 point to point control Unit: rpm
Pn648	JPOS0 Point to point	Immediately	Р	1st order filter time of JPOS0 point to point control can



Parameter No.	Description	Setting Validation	Control Mode	Function and Meaning
	1st orderfilter			stop or start the servomotor mildly.
				1st order filter of other point to point control.
Pn663	JPOS15 Point to point 1st orderfilter	Immediately	Р	1st order filter time of JPOS15 point to point control can stop or start the servomotor mildly.
Pn664	JPOS0 point to point control stop time	Immediately	Р	JPOS0 point to point control stop time Unit: 50ms
				Other point to point control stop time
Pn679	point control stop	Immediately	Р	JPOS15 point to point control stop time Unit: 50ms
Pn680	Reserved			—
Pn681	Hex	Immediately	Ρ	<ul> <li>Pn681.0 Single/cyclic, start/reference point selection</li> <li>[0] Cyclic operation, PCL start signal, NCL search reference point in forward direction.</li> <li>[1] Single operation, PCL start signal, NCL search reference point in forward direction.</li> <li>[2] Cyclic operation, NCL start operation, PCL search reference point in forward direction.</li> <li>[3] Single operation, NCL start operation, PCL search reference point in forward direction.</li> <li>[3] Single operation, NCL start operation, PCL search reference point in forward direction.</li> <li>Pn681.1 Change step and start mode</li> <li>[0] Delay to change step, no need of start signal, delay to start after S-ON.</li> <li>[1] PCON change step, no need of start signal, PCON delay to start after S-ON, but inside pulse can not stop when PCON off.</li> <li>[2] Delay to change step, need start signal, canceling start signal can immediately stop inside pulse.</li> <li>Return to programme start point process step when reset.</li> <li>[3] PCON change step, need start signal, canceling start signal can immediately stop inside pulse. Return to Programme start point process step when reset.</li> <li>[4] PC681.2 Change step input signal mode</li> <li>[0] Change step input signal pulse mode</li> <li>[1] Change step input signal pulse mode</li> <li>[2] Condange step node</li> <li>[3] Change step sequentially</li> <li>[3] Change steps randomly</li> </ul>
Pn682	Programme mode	Immediately	Р	[0] Incremental programme [1] Absolute programme
Pn683	Programme start step	Immediately	Р	Select the start point of the point to point control
Pn684	Programme stop step	Immediately	Р	Select the stop point of the point to point control.
Pn685	Search travel speed in position	Immediately	Р	Search the servomotor speed in the direction of reference point towards travel switch.



Parameter	Description	Setting Validation	Control	Function and Meaning
NO.	control (contact	valuation	Mode	
	reference); Speed of finding reference point (Hitting the origin signal ORG) in position homing control.			
Pn686	Leave travel switch speed in position control (contact reference); Speed of finding reference point (Leaving the origin signal ORG) in position homing control.	Immediately	Ρ	Search the servomotor speed when the reference point leaves travel switch.
Pn687	Position teaching pulse	Immediately	Р	The two parameters are used in combination, and the algebraic sum of them is the current position of position
Pn688	Position teaching pulse	Immediately	Р	teaching. When performing the position teaching by utility function, the algebraic sum of the two parameters are given to the current position Pn687 unit: 10000P Pn688 unit: 1P
Pn689	Homing mode setting	Immediately	Ρ	Pn689.0 Homing Mode         [0]Homing in the forward direction         [1]Homing in the reverse direction         Pn689.1 Search C-Pulse Mode         [0]Return to search C-Pulse when homing         [1]Directly search C-Pulse when homing         Pn689.2 Homing trigger starting mode         [0]Homing function disabled         [1]Homing triggered by SHOM signal (rising edge)         Pn689.3 Reserved
Pn690	Number of offset pulses during homing	Immediately	Р	unit: 10000P
Pn691	Number of offset pulses during homing	Immediately	Р	unit: 1P
Pn695	Running speed of offset pulses	Immediately	Р	Unit: rpm
Pn700	Нех	After restart	ALL	Pn700.0 MODBUScommunication baud rate [0] 4800bps [1] 9600bps [2] 19200bps



Parameter	Description	Setting	Control	Function and Meaning
No.	Description	Validation	Mode	Function and Meaning
				[3] 38400bps
				[4] 57600bps
				[5] 115200bps
				Pn700.1 MODBUS protocol selection
				[0] 7, N, 2 (MODBUS,ASCII)
				[1] 7, E, 1 (MODBUS,ASCII)
				[2] 7, O, 1 (MODBUS,ASCII)
				[3] 8, N, 2 (MODBUS,ASCII)
				[4] 8, E, 1 (MODBUS,ASCII)
				[5] 8, O, 1 (MODBUS,ASCII)
				[6] 8, N, 2 (MODBUS,RTU)
				[7] 8, E, 1 (MODBUS,RTU)
				[8] 8, O, 1 (MODBUS,RTU)
				Pn700.2 Reserved
				Pn700.3 Reserved
Pn701	MODBUSAxis address	After restart	ALL	Axis address of MODBUS protocol communication
Pn702	Reserved			_
				Pn703.0 CAN communication baud rate
	CAN communication speed	After restart	ALL	[0] 50Kbps
				[1] 100Kbps
				[2] 125Kbps
D=702				[3] 250Kbps
P11703				[4] 500Kbps
				[5] 1Mbps
				Pn703.1 Reserved
				Pn703.2 Reserved
				Pn703.3 Reserved
Pn704	CAN communication contact	After restart	ALL	CANopen Aix address of communication
				Pn711.0 corresponding port CN1_A/B/C_10
				Pn711.1 corresponding port CN1_A/B/C_11
				Pn711.2 corresponding port CN1_A/B/C_12
				Pn711.3 corresponding port CN1_A/B/C_13
				Corresponding signal of each data is shown as fellow:
				0: Enable the signal definition that defined by Pn509
				1: GEAR1 (Switching of the electronic gear ratio)
				2: GEAR2 (Switching of the electronic gear ratio)
 	Input signal	After restart		3: JOGP (JOG in positive direction by I/O)
	allocation	Aller restart		4: JOGN (JOG in negative direction by I/O)
				5: SP (control mode switching signal for position control
				( contact reference) <>speed control(contact
				reference) control mode
				6: POS1 (Selection of the point 1 under position control
				[ contact reference ] )
				7: POS2 (Selection of the point 2 under position control
				[ contact reference ])
				8: POS3 (Selection of the point 3 under position control



Parameter	Description	Setting	Control	Function and Meaning
No.	••••	Validation	Mode	
				<ul> <li>[ contact reference ])</li> <li>9: POS4 (Selection of the point 4 under position control</li> <li>[ contact reference ])</li> <li>10~14: Reserved</li> <li>15: Specified (Signal defined by customer, read special object by CANopen)</li> </ul>
Pn712	Input signal allocation	After restart	ALL	Pn712.0 corresponding port CN1_A/B/C_14 Pn712.1 corresponding port CN1_A/B/C_15 Pn712.2 corresponding port CN1_A/B/C_16 Pn712.3 corresponding port CN1_A/B/C_17 Corresponding signal of each data is shown as fellow: 0: Enable the signal definition that defined by Pn510 1: GEAR1 (Switching of the electronic gear ratio) 2: GEAR2 (Switching of the electronic gear ratio) 3: JOGP (JOG in positive direction by I/O) 4: JOGN (JOG in negative direction by I/O) 5: SP (control mode switching signal for position control [contact reference] <>speed control[contact reference] control mode) 6: POS1 (Selection of the point 1 under position control [ contact reference ]) 7: POS2 (Selection of the point 2 under position control [ contact reference ]) 8: POS3 (Selection of the point 3 under position control [ contact reference ]) 9: POS4 (Selection of the point 4 under position control [ contact reference ]) 10~14: Reserved 15: Specified (Signal defined by customer, read special object by CANopen)
Pn840	Hex	After restart	ALL	Pn840.0 Encoder model selection         [6] Wire-saving incremental encoder         Pn840.1 Motor designing sequence         [0] EM A / EM C         [1] EM B         Pn840.2 Power level of Machine         [0] 200W         [1] 400W         [2] 750W         [3] 1000W         [E] 50W         [F] 100W         Pn840.3 Reserved (For factory using)

Note:

 $\oplus \mathsf{Each}$  axis can run in different control mode independently by setting Pn006.0.

②The setting range and factory setting of Pn401 to Pn405 depend on the actual overload capacity.



ltem	Alarm name	Possible reason	Solution
A.01	Paameter breakdown	The power supply was turned OFF while changing the parameter setting.	Set Fn001 to initialize the parameter and input parameter again.
		The number of times that parameters were written exceeded the limit. For example, the parameter was changing every scan through the host controller.	Replace the servo drive.
		The circuit of servo drive is faulty.	Replace the servo drive.
A.02	A/D breakdown	A malfunction occurred in reading section of the analog reference input.	Clear and reset the alarm and restart the operation.
		A servo drive board fault occurred	Replace the servo drive.
	Overspeed	The position or speed reference input is too large.	Reduce the reference value.
A 03		The setting of the reference input gain is incorrect.	Correct the reference input gain setting.
A.03		The order of phase U, V and W in the servo motor wiring is incorrect.	Correct the servo motor wiring.
		A servo drive board fault occurred.	Replace the servo drive.
		The servo motor wiring is incorrect or the connection is faulty.	Correct the servo motor wiring.
A.04	Overloaded	The actual torque exceeds the rated torque or the starting torque largely exceeds the rated torque.	Reconsider the load and operation conditions, or reconsider the servo motor capacity.

شرکت مهندسی بازرگانی

ltem	Alarm name	Possible reason	Solution
A.04	Overloaded	The encoder wiring is incorrect or the connection is faulty.	Correct the encoder wiring.
		The servo motor over temperature and lead to demagnetization.	Cooling the servo motor, or replace the servo motor.
		A servo drive board fault occurred.	Replace the servo drive.
A 05	Deviation	Internal pulse counter fault occurred.	Clear and reset the alarm and restart the operation.
A.05	error	A servo drive fault occurred.	Replace the servo drive.
	Position error pulse overflow	The servo drive gain adjustment is improper.	Increase the speed loop gain (Pn102) and the position loop gain (Pn104).
		The position reference pulse frequency is too high.	Smooth the pulse input and reduces the electronic gear ratio.
		Setting of the overflow counter (Pn504) is incorrect.	Set the parameter Pn504 to proper value.
A.06		The servo motor specifications do not meet the load conditions such as a torque and moment of inertia.	Reconsider and correct the load and servo motor capacity.
		Wiring of the servo motor U, V and W are incorrect.	Correct the servo motor wiring.
		A servo drive board fault occurred.	Replace the servo drive.

3	شرکت مهندسی بازرگانی 💊 🕯
	ا، ک، دنا
DENAV	

ltem	Alarm name	Possible reason	Solution
A.07	Electronic gear over limited	The electronic gear ratio outside the setting range.	Reduce the fraction (both numerator and denominator) until you obtain integers within the range (0.01 $\leq$ Electronic gear ratio (B/A) $\leq$ 100).
		The input frequency is incorrect.	Check the input technical specification of reference pulse.
A.08	Current feedback (channel A) error	A servo drive board fault occurred.	Set Fn005 to automatic adjustment of the offset of current.
A.09	Current feedback (channel B) error	A servo drive board fault occurred.	Set Fn005 to automatic adjustment of the offset of current.
A.10	Encoder feedback error	The encoder wiring is incorrect or the connection is faulty.	Correct the encoder wiring.
		An encoder fault occurred.	Replace the servo motor.
		The encoder wiring is	Replace the servo drive.
	Overcurrent	incorrect or the connection is faulty.	Correct the encoder wiring.
		A short circuit occurred between phase U, V and W of the servo motor.	Repair or replace the servo motor power cable.
A.12		A short circuit occurred between the grounding and UV or W of the servo motor cable.	Repair or replace the servo motor power cable.
		The dynamic brake was active too frequently.	Replace the servo drive, and reduce the DB operation frequency.
		The ambient temperature exceeds 55°c.	Relocate the servo drive, and keep it away from other devices.
		A servo drive fan fault occurred.	Replace the servo drive.



ltem	Alarm name	Possible reason	Solution
A.12	Overcurrent	The overload or regenerative power exceeds the regenerative resistor capacity.	Reconsider the load and operation conditions.
		C Phase angle of encoder was deflected.	Refer to the guidance; adjust the operation of the encoder installation.
		The wrong alarm signal. 🔺	Modify the value of parameter Pn521 as 1.
		The AC power voltage is too high.	Correct the input voltage.
A.13	overvoltage	The motor speed is high and load movement of inertia is excessive, resulting in insufficient regenerative capacity.	Check the load movement of inertia and minus load specifications, Reconsider the load and operation conditions.
		A servo drive board fault occurred	Replace the servo drive.
		The wrong alarm signal.	Modify the value of parameter Pn521 as 1.
A.14	Under voltage	The AC power supply voltage was lowered, and large voltage drop occurred.	Correct the input voltage.
		The fuse of the servo drive is blown out.	Replace the servo drive.
		The surge current limit resistor is disconnected, resulting in an abnormal power supply voltage or in an overload of the surge current limit resistor.	Replace the servo drive. Check the power supply voltage, and reduce the number of times that the main circuit is turned ON or OFF.
		The jumper of servo drives between $\oplus$ 1 and $\oplus$ 2 is removed.	Correct the wiring.



ltem	Alarm name	Possible reason	Solution
A 14	Under voltage	A servo drive board fault occurred	Replace the servo drive.
A.14		The wrong alarm signal.	Modify the value of parameter Pn521 as 1.
	Regenerative resistor breakdown	Check for incorrect wiring or a disconnected wire in the regenerative resistor.	Correct the wiring for the external regenerative resistor.
		The jumper of servo drive between B2 and B3 is removed.	Correct the wiring.
A.15		A servo drive fault occurred, such as regenerative transistor or internal regenerative resistor was breakdown.	Replace the servo drive.
		Alarm occurred frequently, while The resistor is normal.	Modify the value of parameter Pn515 as 3.
A.16	Regeneratio n error detected	The generating state continued.	Select a proper regenerative resistance capacity, or reconsider the load and operation conditions.
		The regenerative energy is excessive.	Select a proper regenerative resistance capacity, or reconsider the load and operation conditions.
		The power supply is overvoltage.	Correct the input voltage.
		A servo drive board fault occurred	Replace the servo drive.
	Resolver error	Resolver feedback fault occurred	Replace the servo motor.
A.17		A servo drive board fault occurred	Replace the servo drive.
		After power on the drive, fault occurred	Connect and grounding the Pin50 (1CN) to earth.



ltem	Alarm name	Possible reason	Solution
A.20	Power lines open phase	The three-phase power supply wiring is incorrect.	Correct the power supply wiring.
		The three-phase power supply is unbalanced.	Balance the power supply by changing phases.
		A servo drive fault occurred.	Replace the servo drive, check the power supply voltage.
		The three-phase power supply wiring is incorrect.	Correct the power supply wiring.
A.21	Voltage fluctuation detected	One cycle of input voltage vareform lost.	Correct the input voltage, recommend utilizing voltage stabilizer.
	delected	A servo drive fault occurred.	Replace the servo drive, check the power supply voltage.
	Motor temperature sensor is break off	Encoder cable wiring is failed.	Correct the servo motor encoder cable.
A.22		Temperature sensor feedback signals lost.	Replace the servo motor
A.23	23 Brake overcurrent alarm	Regenerative resistor resistance is too small	Replace the external resistor by higher resistance.
		Regenerative circuit is failed	Replace the servo drive.
A.25	U&V&W	The servo motor wiring is incorrect or the connection is faulty.	correct the parameters of Pn840 and Pn005
A.26	winding phase overcurrent	The servo motor over temperature and lead to demagnetization.	Correct the servo motor wiring.
A.27		A servo motor fault occurred.	Replace the servo drive.
A.41	Reserved	Reserved	
A.42	Motor model unmatched	The encoder wiring is incorrect or the connection is faulty.	Correct the encoder wiring.
		The parameter setting for servo motor is incorrect.	Correct the setting of Pn005.3.



Item	Alarm name	Possible reason	Solution
	Drive model unmatched	A servo drive fault occurred.	Set Fn001 to initialize the parameter.
A.43		The parameter setting for servo drive is incorrect.	Correct the setting of Pn840.2.
*	Absolute encoder Multi turn information error	Multi turn information of encoder is faulty.	Set Fn010 to clear error.
A.45		An absolute encoder fault occurred.	If the alarm cannot be reset by setting Fn011, replace the encoder.
*	Encoder	Multi turn information of encoder is overflow	Set Fn010 to clear error.
A.46	information overflow	An absolute encoder fault occurred.	If the alarm cannot be reset by setting Fn011, replace the encoder.
* A.47	Absolute encoder battery error	Multi turn information of encoder is lost.	Set Fn010 to clear error.
		The battery voltage is lower than the specified value 2.5V	Replace the battery, and then turn ON the power to the encoder.
A.48	Absolute encoder battery error	The battery voltage is lower than the specified value 3.1V	Replace the battery, and then turn ON the power to the encoder.
		The encoder cable does not have a battery inside.	Set Pn002.2 to 1, and change the absolute encoder into incremental mode.
	Encoder communicati	The parameter setting for encoder is incorrect.	Correct the setting of Pn840.0.
A.50		The encoder wiring is incorrect or the connection is faulty.	Correct the encoder wiring.
	occurred	An encoder fault occurred.	Replace the servo motor.
		Noise interference occurred on the signal line from encoder.	Take the measure against noise for the encoder wiring.

شرکت مهندسی بازرگانی ارکیدلنا

ltem	Alarm name	Possible reason	Solution
*	* Encoder over speed	The servo motor runs at 100RPM without power supply.	Set Fn010 to clear error.
A.51		An encoder fault occurred.	Replace the servo motor.
A.52	Encoder data error	Absolute state of encoder is faulty.	Set Fn011 to clear error.
		An encoder fault occurred.	Replace the servo motor.
A.53	Encoder data error	Calculation result of encoder is faulty.	Set Fn011 to clear error.
		An encoder fault occurred.	Replace the servo motor.
A.54	Encoder	The parity bit and cut-off bit of control field are faulty.	Clear and reset the alarm and restart the operation.
	uala enoi	An encoder fault occurred.	Replace the servo motor.
	Encoder	A servo drive fault occurred.	Replace the servo drive.
A.55	checksum error	An encoder fault occurred.	Replace the servo motor.
A.56	Encoder data error	The cut-off bit of control field is faulty.	Clear and reset the alarm and restart the operation.
A.00		An encoder fault occurred.	Replace the servo motor.
A.58	Encoder data error	Datum of EEPROM is empty.	Clear and reset the alarm and restart the operation.
		An encoder fault occurred.	Replace the servo motor.
A.59	Encoder data error	Data format of EERPOM is faulty.	Clear and reset the alarm, please refer to the guidance for encoder phase angle adjustment.
		An encoder fault occurred.	Replace the servo motor.
A.60	Communicat e module undetected	The communicate module is incorrect.	Clear and reset the alarm and restart the operation.
		The contact between the module and the servo drive is faulty.	Insert securely the connector.
		A module fault occurred.	Replace the communication module.



ltem	Alarm name	Possible reason	Solution
A.61	Handshaking fault	CPU of communication module is faulty.	Replace the communication module.
	occurred	A servo drive fault occurred.	Replace the servo drive.
Δ 62	Communicat	Servo drive cannot receive cyclist data from communication module.	Check and fix the connection between servo drive and module.
	occurred	A servo drive board fault occurred	Replace the servo drive.
A.63	63 Module fault occurred	Communication module cannot receive response package from servo drive.	Replace the communication module.
		A servo drive board fault occurred	Replace the servo drive.
A 64	Connection dropping detected	The BUS connection is incorrect.	Correct the BUS wiring.
A.64		A module fault occurred.	Replace the communication module.
A.66	CAN communicate faulty occurred	Noise interference occurred on the signal line from encoder.	Take the measure against noise for the encoder wiring.
		A module fault occurred.	Replace the communication module.
A.67	Receiving heartbeat timeout	The master station sends heartbeat time timeout	Check and fix the connections between servo drive and master station.
A.69	Synchronizat ion signal monitoring cycle is longer than setting	The filling time and the cycle of the synchronous signal does not match.	Correct the cycle time for synchronization
A.00	Not an error	Normal status.	

\* If A.45,A.46,A.47,A.51 alarm occurred, please refer to the assitantance function.(Fn010,Fn011)

 $\bigstar$  Only available for 7.5Kw, 11Kw and 15Kw drives.